



Bush-Whacker®

TOUGH ON GRASS, EASY ON YOUR WALLET



2014
PARTS BOOK
T-240
(540 RPM)

PARTSBOOK

This part of the manual contains part numbers and illustrations based on the latest information available at the time of print.

Hall Manufacturing, Inc. reserves the right to make changes at any time without notice or obligation. Additional copies of the manuals are available from your local Bush-Whacker dealer.

Hall Manufacturing, Inc.
3706 E. Washington Ave., P.O. Box Drawer 5638
North Little Rock, AR 72119
(501)945-7550

**Always use genuine Bush-Whacker replacement parts,
available through the network of authorized dealers.**

Explanation of the terms in the Partsbook

Ref. No.ò Refers to the numbered parts in an illustration

 
Part No.ò Refers to the part number of the part. This is what you use when ordering new parts, as well as description and quantity.

Descriptionò Gives the description of the part

Qtyò Quantity listed for each component on the illustration, not the total quantity of that part used on the entire machine.

Remarksò any comments (refers to detail pages of parts, etc.)


T-240 Assembly Breakdown

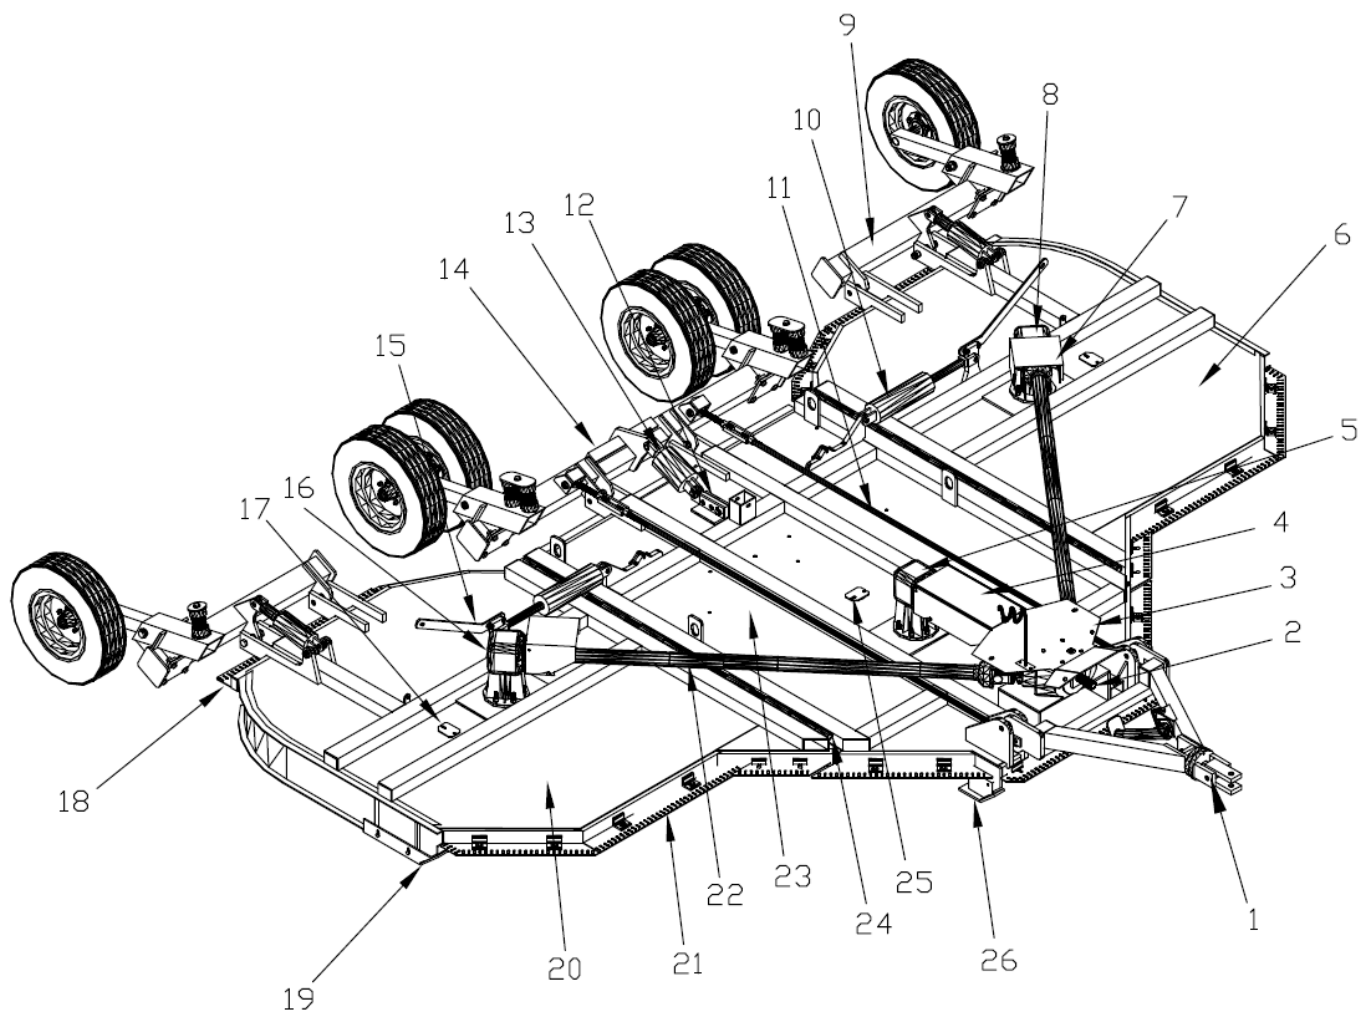

T-240 Assembly Breakdown


Ref. No.	Description	Page Number
1	Tongue Assembly	6
2	Divider Box	12-13
3	Divider Box Shield Assembly	46
4	Center Gearbox Shield Assembly	47
5	Center Gearbox	16-17
6	Left Wing Assembly (Part #3407)	N/A
7	Wing Gearbox Shield Assembly	48
8	Left Wing Gearbox	16-17
9	Wing Pivot and Axle Arm Assembly	26
10	Wing Lift Cylinder	30
11	Level Rod Assembly	24
12	Center Lift Cylinder Mounting Point	29
13	Center Lift Cylinder	28
14	Center Pivot Assembly	25
15	Travel Bar Assembly	31
16	Right Wing Gearbox	12-13
17	Wing Access Cover (Part #2965-17)	N/A
18	Rear Chain Guards	43-45
19	Wing Skid Shoe	33
20	Right Wing Assembly (Part #3406)	N/A
21	Front Chain Guards	38-42
22	Wing Drive Shaft	10-11
23	Center Deck Assembly (Part #3405)	N/A
24	Hinge Pins (Part #3413)	N/A
Not Shown	Hinge Roll Pin (Part #3414)	N/A
25	Center Access Cover (Part #2963-18)	N/A
26	Center Skid Shoe	32
Not Shown	Hydraulic Hose Plan	34
Not Shown	Hydraulic Valve	35
Not Shown	Complete Center Drive Shaft	14-15
Not Shown	CV Drive Shaft	20-21
Not Shown	Main Drive Shaft	8-9
Not Shown	Center Rotor Bar Assembly	22
Not Shown	Wing Rotor Bar Assembly	23

 Tongue Assembly with Swivel Clevis

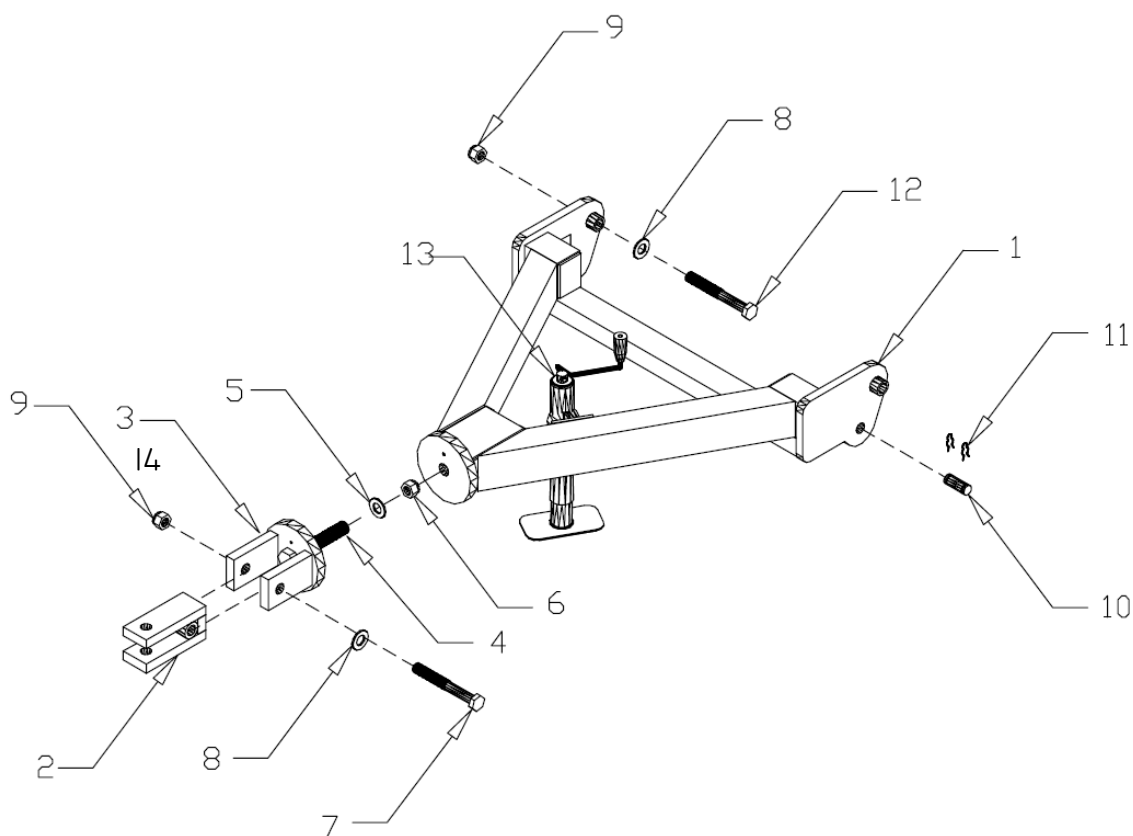


Ref. No.	Part No.	Description	Qty
1	4126	Swivel Tongue Only	1
2	2312	Clevis	1
3	3604	Swivel	1
4	3369	Swivel Bolt	1
5	2531	Washer	1
6	3012	Nut	1
7	2968	Bolt	1
8	3449	Washer	1
9	2638	Nut	3
10	2315	Level Rod Pin	2
11	2313	Cotter Pin	4
12	2629	Bolt	2
13	2969	Jack	1
14	5639	Set screw	1

 Tongue Jack Mounting Assembly

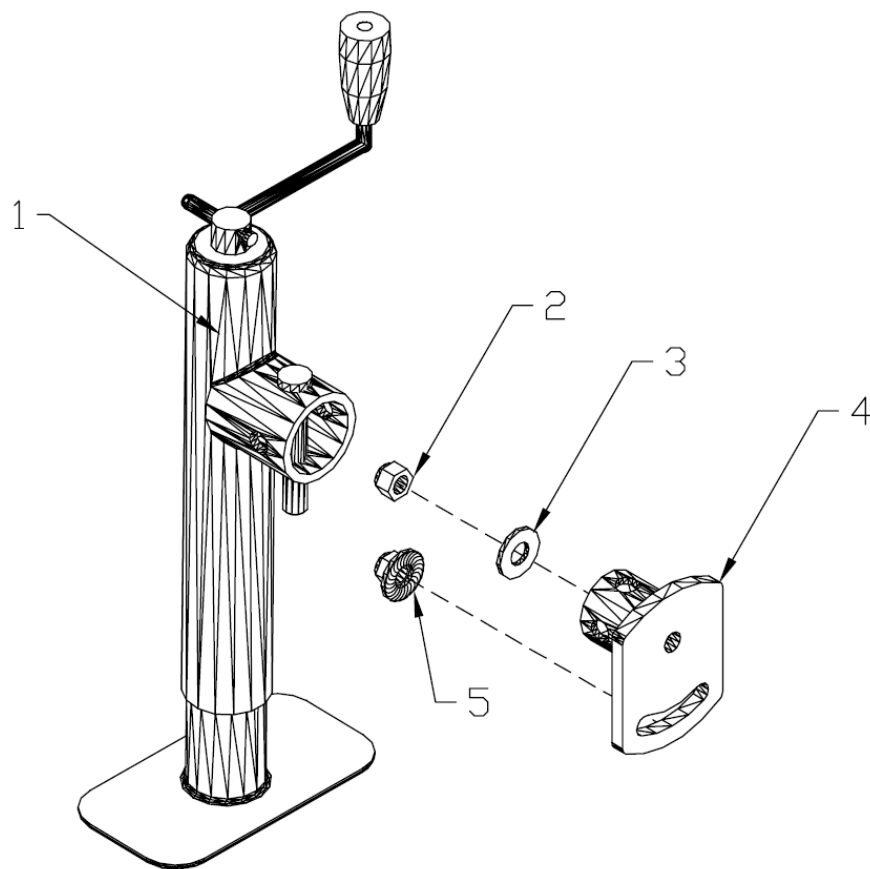

Ref. No.	Part No.	Description	Qty
1	2969	Jack	1
2	2336	Nut	1
3	2337	Washer	1
4	4089	Plate	1
5	4885	Nut	1

 
3913 Main Drive Shaft

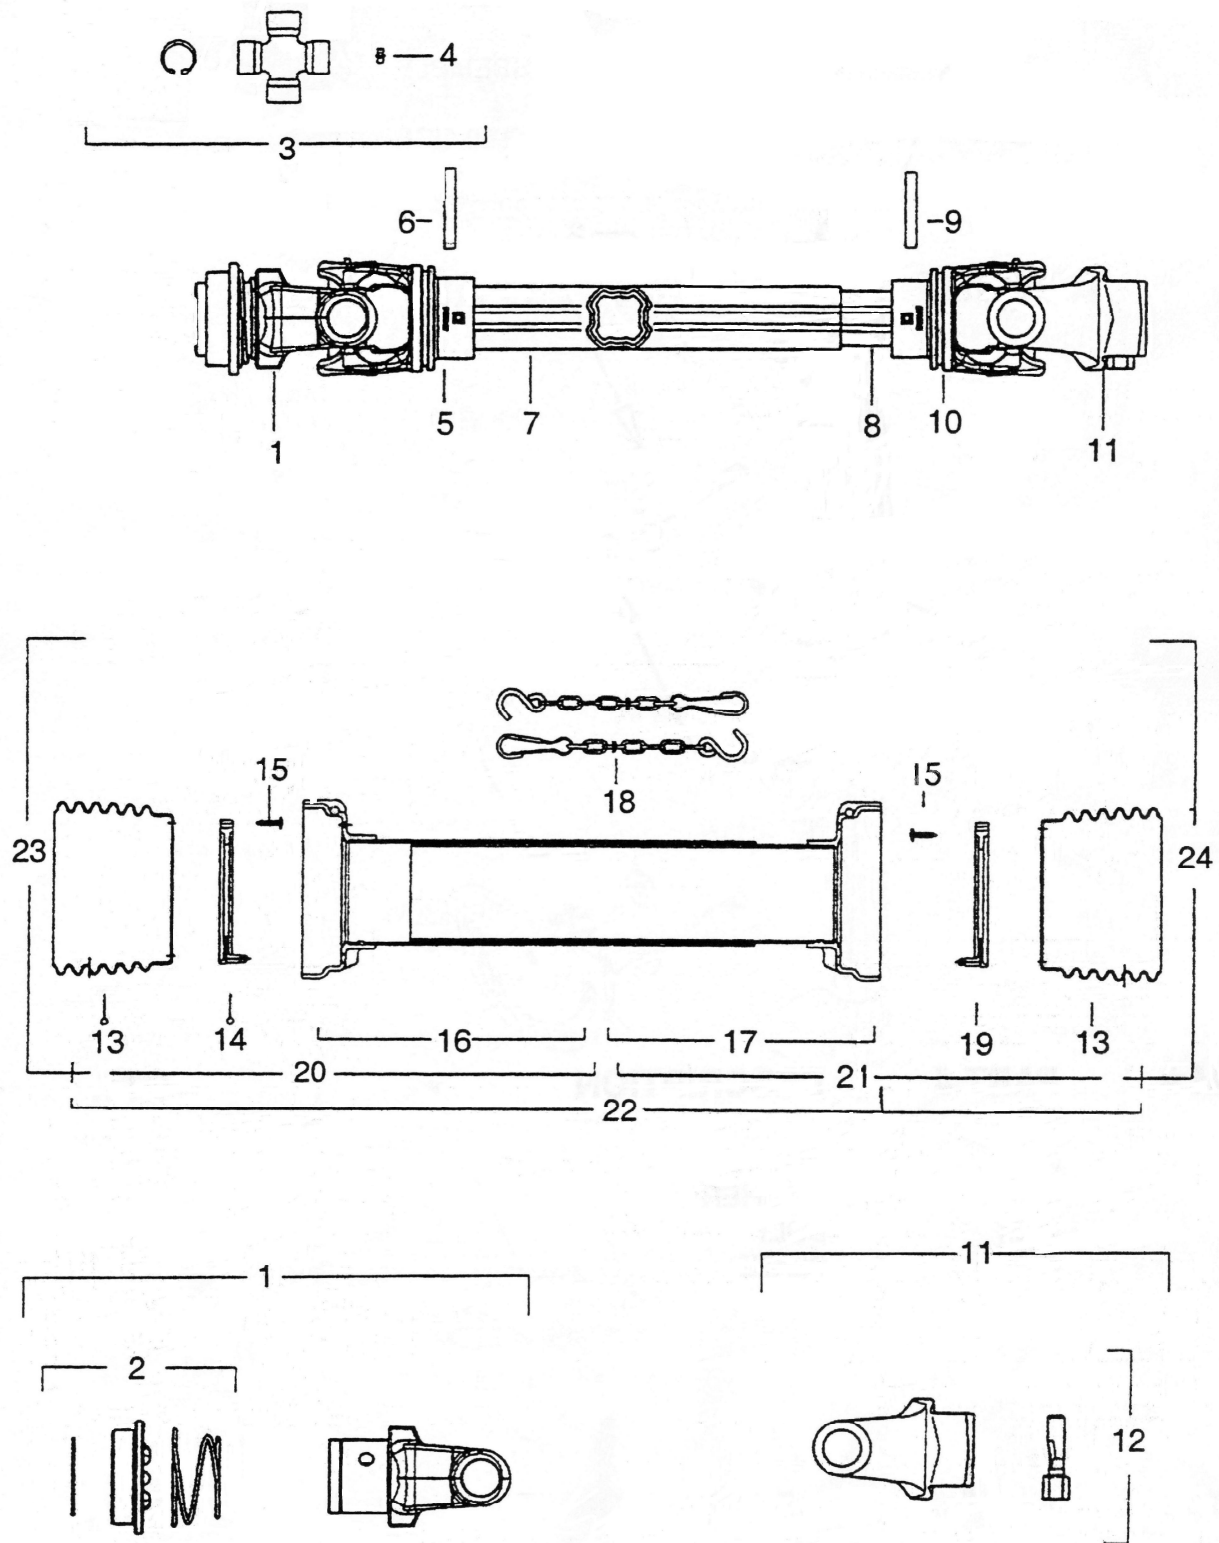

3913 Main Drive Shaft Parts List

Ref. No.	Part No.	Description	Qty
1	3914	Slide Collar Yoke	1
2	3915	Slide Collar Kit	1
3	3916	Cross Kit	2
4	3917	Grease Fitting	1
5	3918	Outer Tube Yoke	1
6	3919	Outer Roll Pin	1
7	3920	Outer Tube (Steel)	1
8	3921	Inner Tube (Steel)	1
9	4145	Inner Roll Pin	1
10	3923	Inner Tube Yoke	1
11	3924	Quick Disconnect Yoke	1
12	3925	QD Pin Kit	1
13	3926	Shield Bell	2
14	3927	Outer Shield Ring	1
15	3928	Shield Screw	6
16	3929	Outer Shield Tube	1
17	3930	Inner Shield Tube	1
18	3931	Shield Safety Chain	2
19	3932	Inner Shield Ring	1
20	3933	Outer Half Shield Complete	1
21	3934	Inner Half Shield Complete	1
22	3935	Complete Shield Assembly	1
23	3936	Outer Half Shaft Complete	1
24	3937	Inner Half Shaft Complete	1

 
4074 Complete Wing Drive Shaft

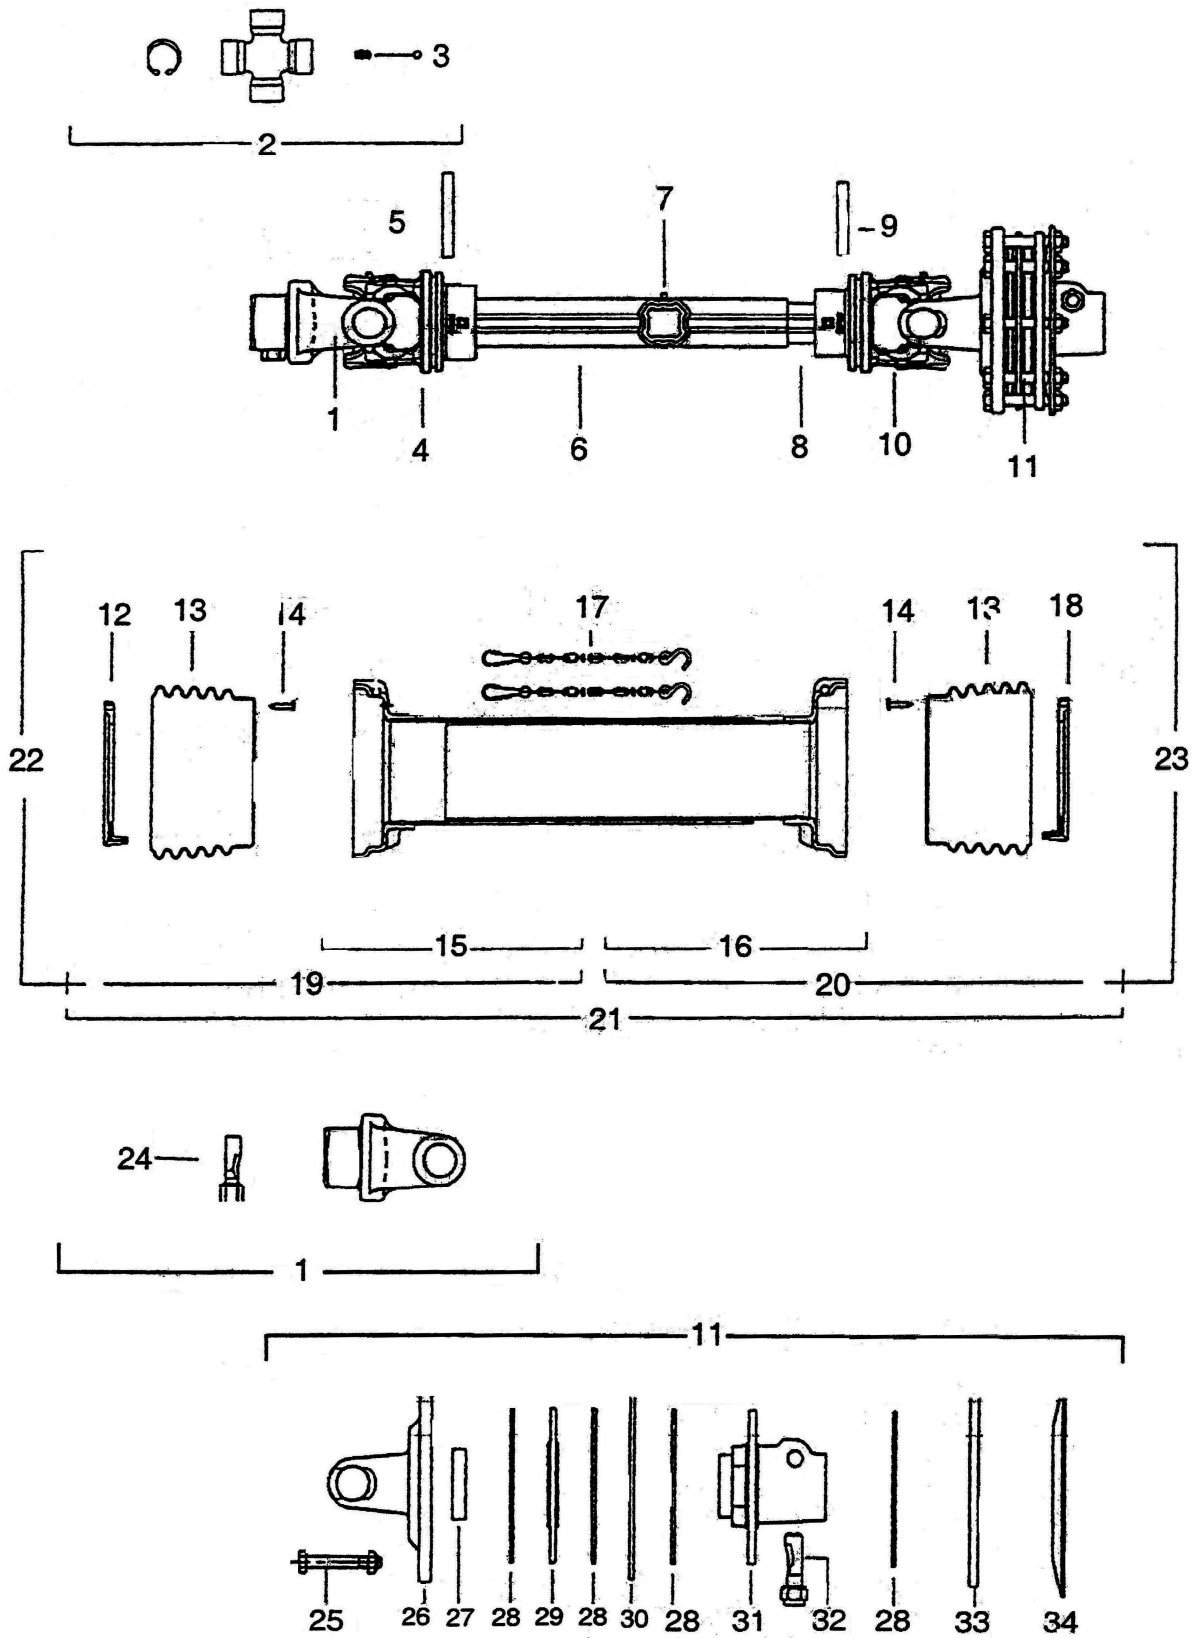

4074 Complete Wing Drive Shaft Parts List

Ref. No.	Part No.	Description	Qty
1	4062	Quick Disconnect Yoke	1
2	3916	Cross Kit	2
3	3917	Grease Fitting	1
4	3918	Outer Tube Yoke	1
5	3919	Outer Roll Pin	1
6	4063	Outer Tube (Steel)	1
7	4008	Grease Fitting	1
8	4064	Inner Tube (Steel)	1
9	3922	Inner Roll Pin	1
10	3923	Inner Tube Yoke	1
11	4065	Complete Clutch Assembly	1
12	3927	Outer Shield Ring	1
13	3926	Shield Bell	2
14	3928	Shield Screw	6
15	4066	Outer Shield Tube	1
16	4067	Inner Shield Tube	1
17	4012	Shield Safety Chain	2
18	3932	Inner Shield Ring	1
19	4068	Outer Shield Complete	1
20	4069	Inner Shield Complete	1
21	4070	Complete Shield Assembly	1
22	4071	Outer Half Shaft Complete	1
23	4072	Inner Half Shaft Complete	1
24	3925	QD Pin Kit	1
25	4098	Bolt with Nut	8
26	4018	Flange Yoke	1
27	3962	Bushing	1
28	3963	Clutch Disk	4
29	3964	Clutch Plate	1
30	3965	Inner Plate	1
31	3966	Splined Hub	1
32	3967	Bolt with Nut	1
33	3968	Outer Plate	1
34	3969	Spring	1

 
3306 Divider Gear Box

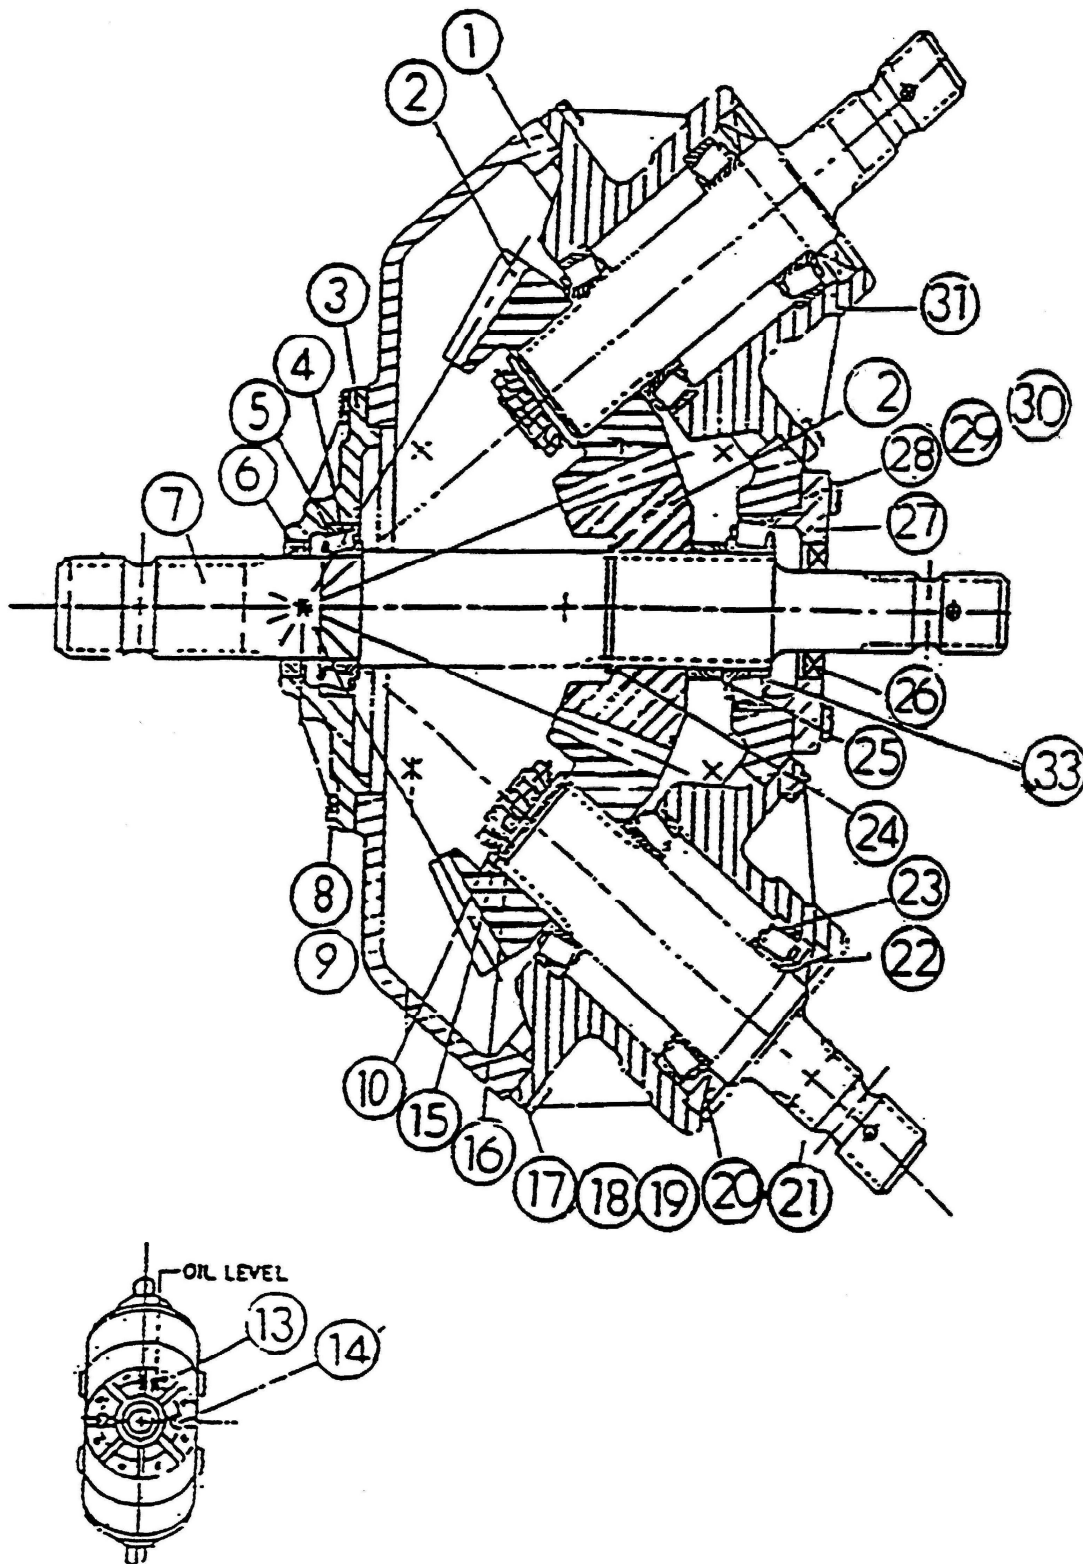

3306 Divider Gear Box
(See Maintenance Section for Recommended Lubrication)
Parts List

Ref. No.	Part No.	Description	Qty
1	2973	Housing	1
2	3307	Gear	3
3	2739	Cap	1
4	2715	Bearing Cone	1
5	2716	Bearing Race	1
6	2713	Seal	1
7	2975	Input Shaft	1
8	2728	Bolt	28
9	2727	Washer	28
10	2741	Lock Nut	2
13	2742	Oil Plug	1
14	2723	Vent Plug	1
15	2743	Lock Washer	2
16	2744	Washer	2
17	2721	Shim	AR
18	2722	Shim	AR
19	2745	Shim	AR
20	2746	Seal	2
21	2976	Shaft	2
22	2711	Bearing Cone	5
23	2712	Bearing Race	4
24	2719	Retaining Ring	1
25	2749	Spacer	1
26	2751	Seal	1
27	2752	Cap	1
28	2753	Shim	AR
29	2754	Shim	AR
30	2755	Shim	AR
31	2756	Cap	2
33	3149	Race	1

 
4061 Complete Center Drive Shaft

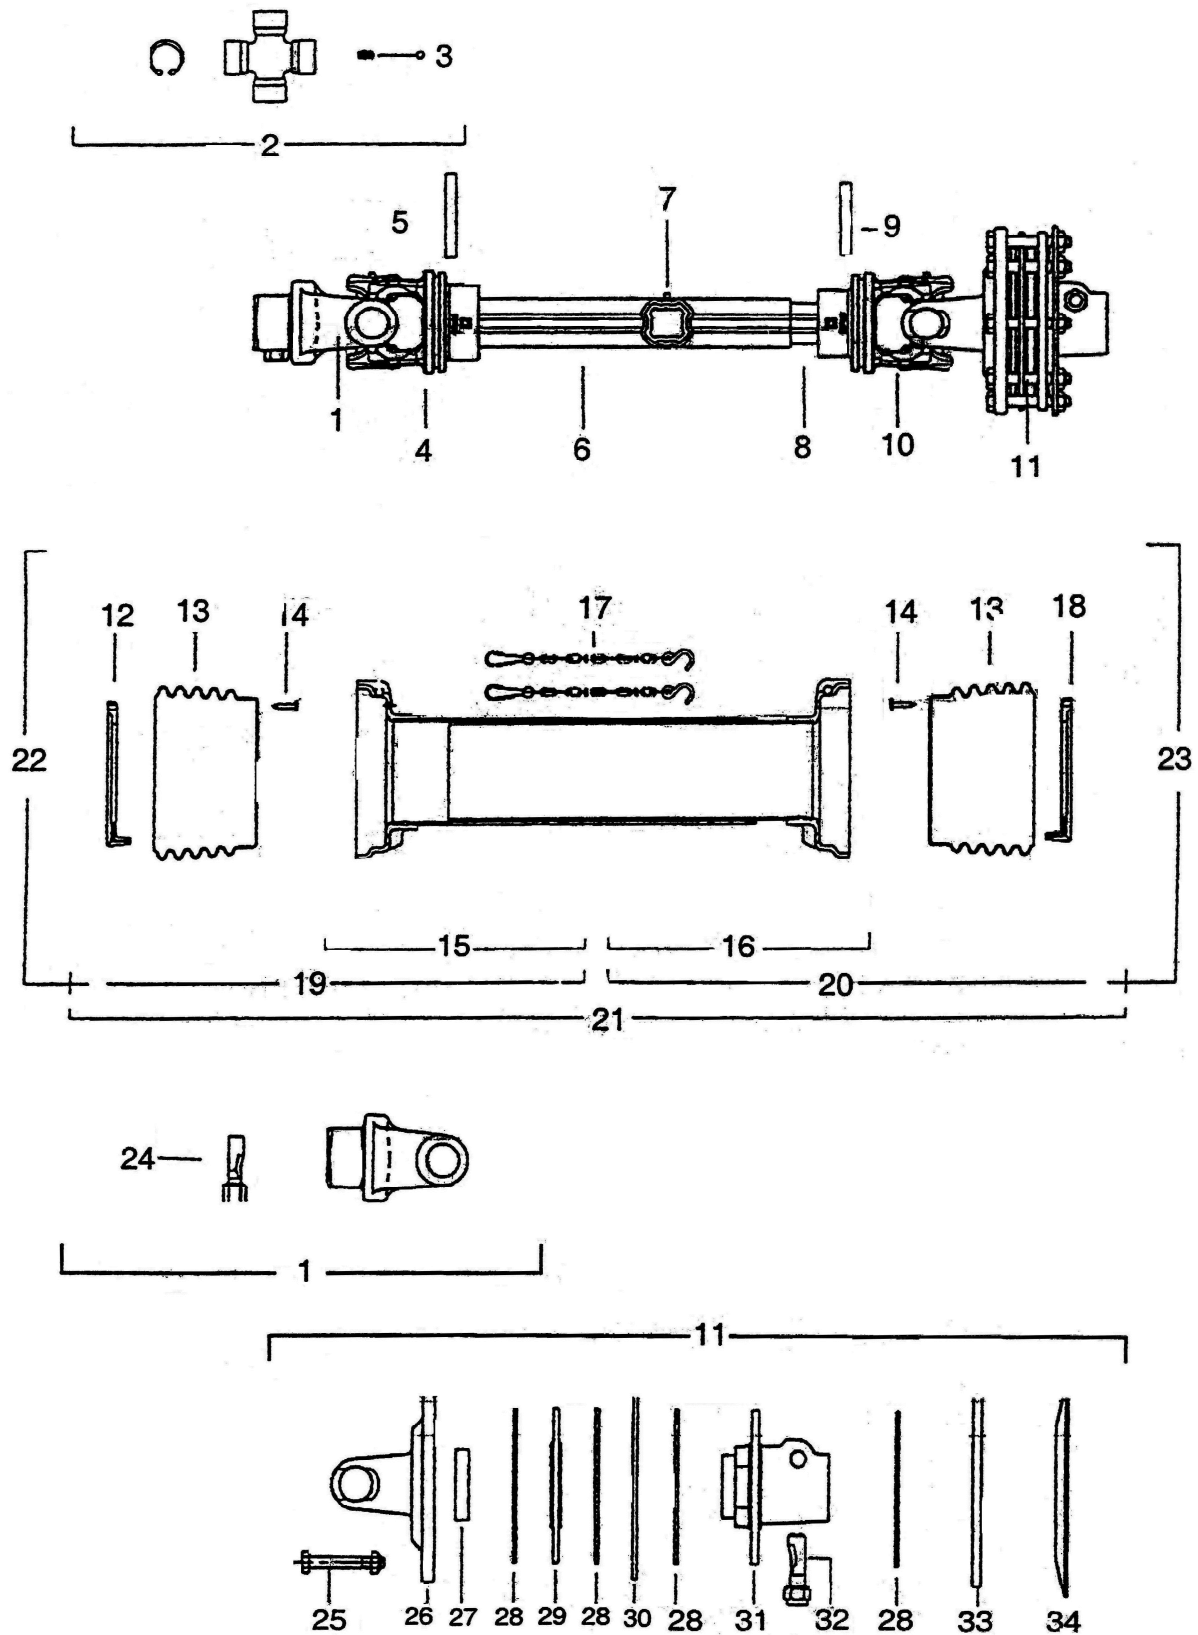

4061 Complete Center Drive Shaft Parts List

Ref. No.	Part No.	Description	Qty
1	4006	Quick Disconnect Yoke	1
2	3941	Cross Kit	2
3	3917	Grease Fitting	1
4	3942	Outer Tube Yoke	1
5	3919	Outer Roll Pin	1
6	4051	Outer Tube (Steel)	1
7	4008	Grease Fitting	1
8	4052	Inner Tube (Steel)	1
9	4145	Inner Roll Pin	1
10	3945	Inner Tube Yoke	1
11	4010	Complete Clutch Assembly	1
12	3927	Outer Shield Ring	1
13	3947	Shield Bell	2
14	3928	Shield Screw	6
15	4053	Outer Shield Tube	1
16	4054	Inner Shield Tube	1
17	4012	Shield Safety Chain	2
18	3932	Inner Shield Ring	1
19	4055	Outer Shield Complete	1
20	4056	Inner Shield Complete	1
21	4057	Complete Shield Assembly	1
22	4058	Outer Half Shaft Complete	1
23	4060	Inner Half Shaft Complete	1
24	3925	QD Pin Kit	1
25	4098	Bolt with Nut	8
26	4018	Flange Yoke	1
27	3962	Bushing	1
28	3963	Clutch Disk	4
29	3964	Clutch Plate	1
30	3965	Inner Plate	1
31	4146	Splined Hub	1
32	3967	Bolt with Nut	1
33	3968	Outer Plate	1
34	3969	Spring	1

 
2707 Gear Box - Center and Left Wing
(See Maintenance Section for Recommended Lubrication)

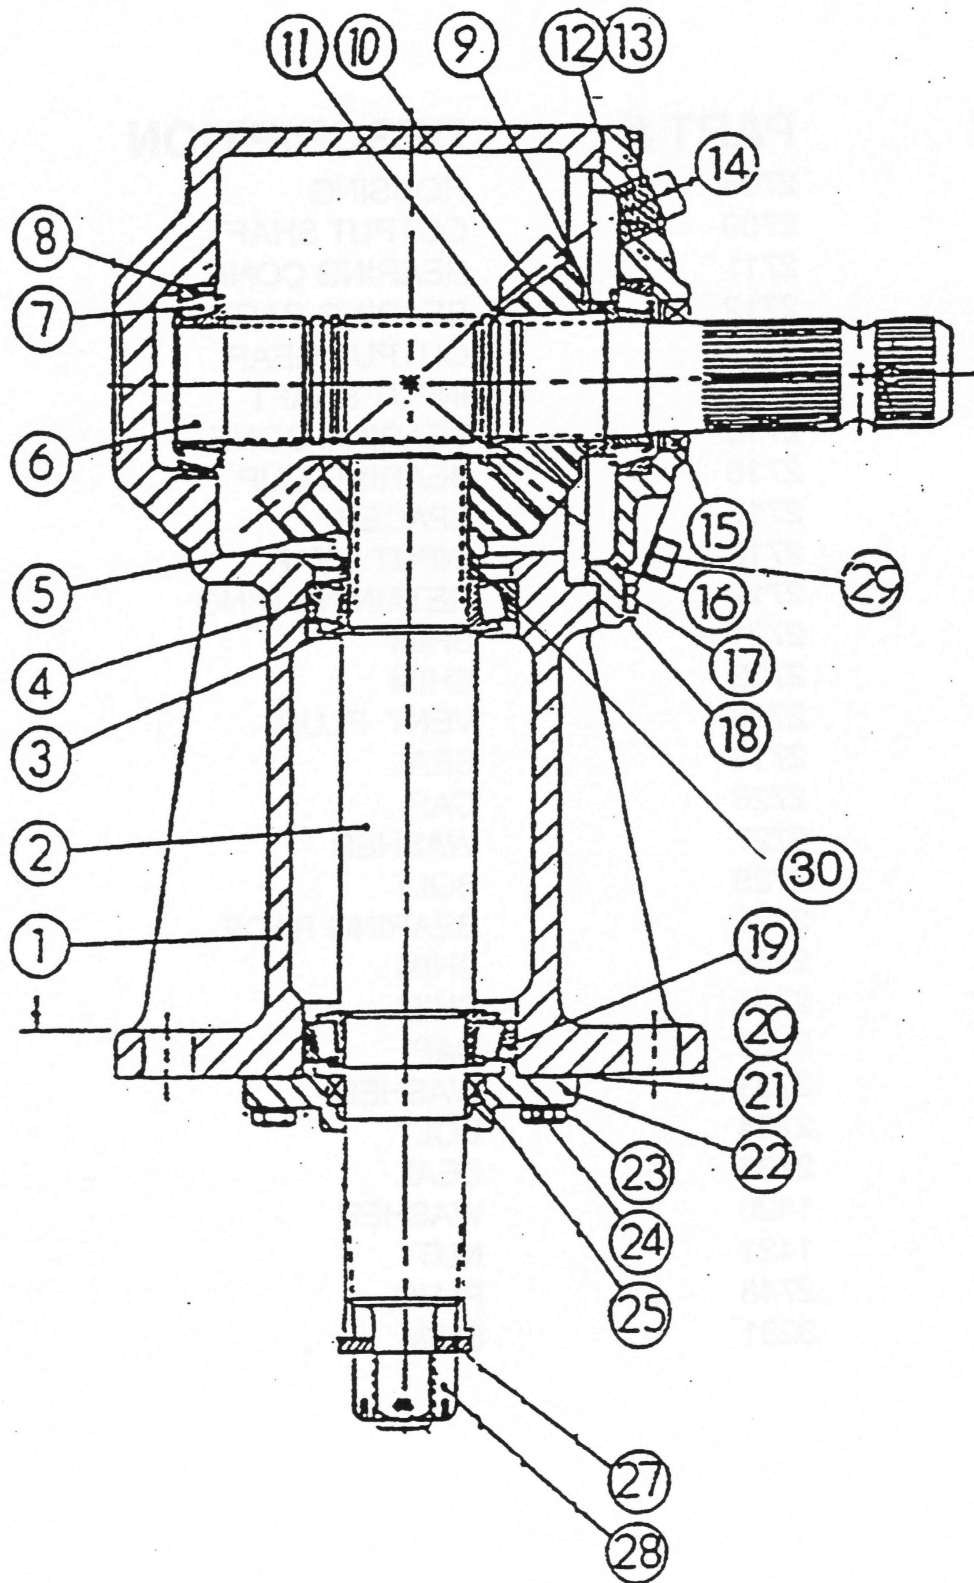

2707 Gear Box - Center and Left Wing
(See Maintenance Section for Recommended Lubrication)
Parts List

Ref. No.	Part No.	Description	Qty
1	2708	Housing	1
2	2709	Output Shaft	1
3	2711	Bearing Cone	2
4	2712	Bearing Race	1
5	2724	Output Gear	1
6	2714	Input Shaft	1
7	2715	Bearing Cone	2
8	2716	Bearing Cup	2
9	2717	Spacer	1
10	2718	Input Gear	1
11	2719	Retaining Ring	1
12	2721	Shim	AR
13	2722	Shim	AR
14	2723	Vent Plug	1
15	2713	Seal	1
16	2726	Cap	1
17	2727	Washer	8
18	2728	Bolt	8
19	2729	Bearing Race	1
20	2730	Shim	AR
21	2731	Shim	AR
22	2732	Cap	1
23	2733	Washer	4
24	2734	Bolt	4
25	2735	Seal	1
27	1420	Washer	1
28	1421	Nut	1
29	2748	Plug	1
30	3231	Shim	AR

 
2758 Gear Box - Right Wing **(See Maintenance Section for Recommended Lubrication)**

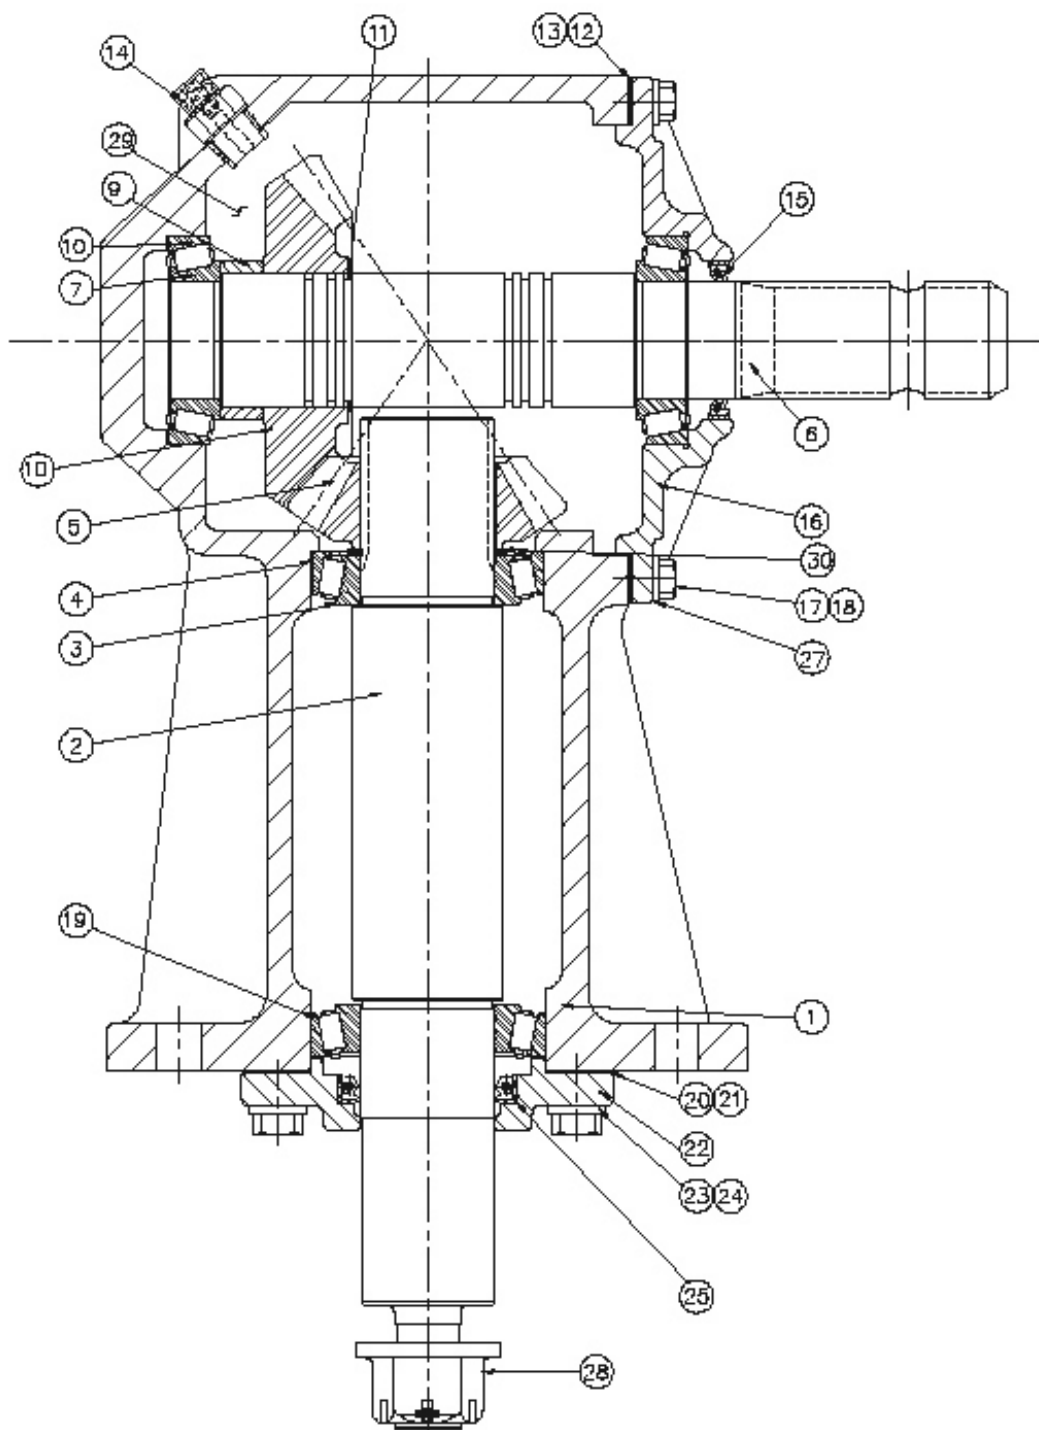

2758 Gear Box - Right Wing
(See Maintenance Section for Recommended Lubrication)
Parts List

Ref. No.	Part No.	Description	Qty
1	2708	Housing	1
2	2709	Output Shaft	1
3	2711	Bearing Cone	2
4	2712	Bearing Race	1
5	2724	Output Gear 13T	1
6	2714	Input Shaft	1
7	2715	Bearing Cone	2
8	2716	Bearing Cup	2
9	2717	Spacer	2
10	2718	Input Gear 19T	1
11	2719	Retaining Ring	1
12	2721	Gasket	AR
13	2722	Gasket	AR
14	2723	Vent Plug	1
15	2713	Seal	1
16	2726	Cap	1
17	2727	Washer	8
18	2728	Bolt	8
19	2729	Bearing Race	1
20	2730	Shim	AR
21	2731	Shim	AR
22	2732	Cap	1
23	2733	Washer	4
24	2734	Bolt	4
25	2735	Seal	1
27	1420	Washer	1
28	1421	Nut	1
29	2748	Plug	1
30	3231	Shim	AR

 
4940 C.V. Drive Shaft

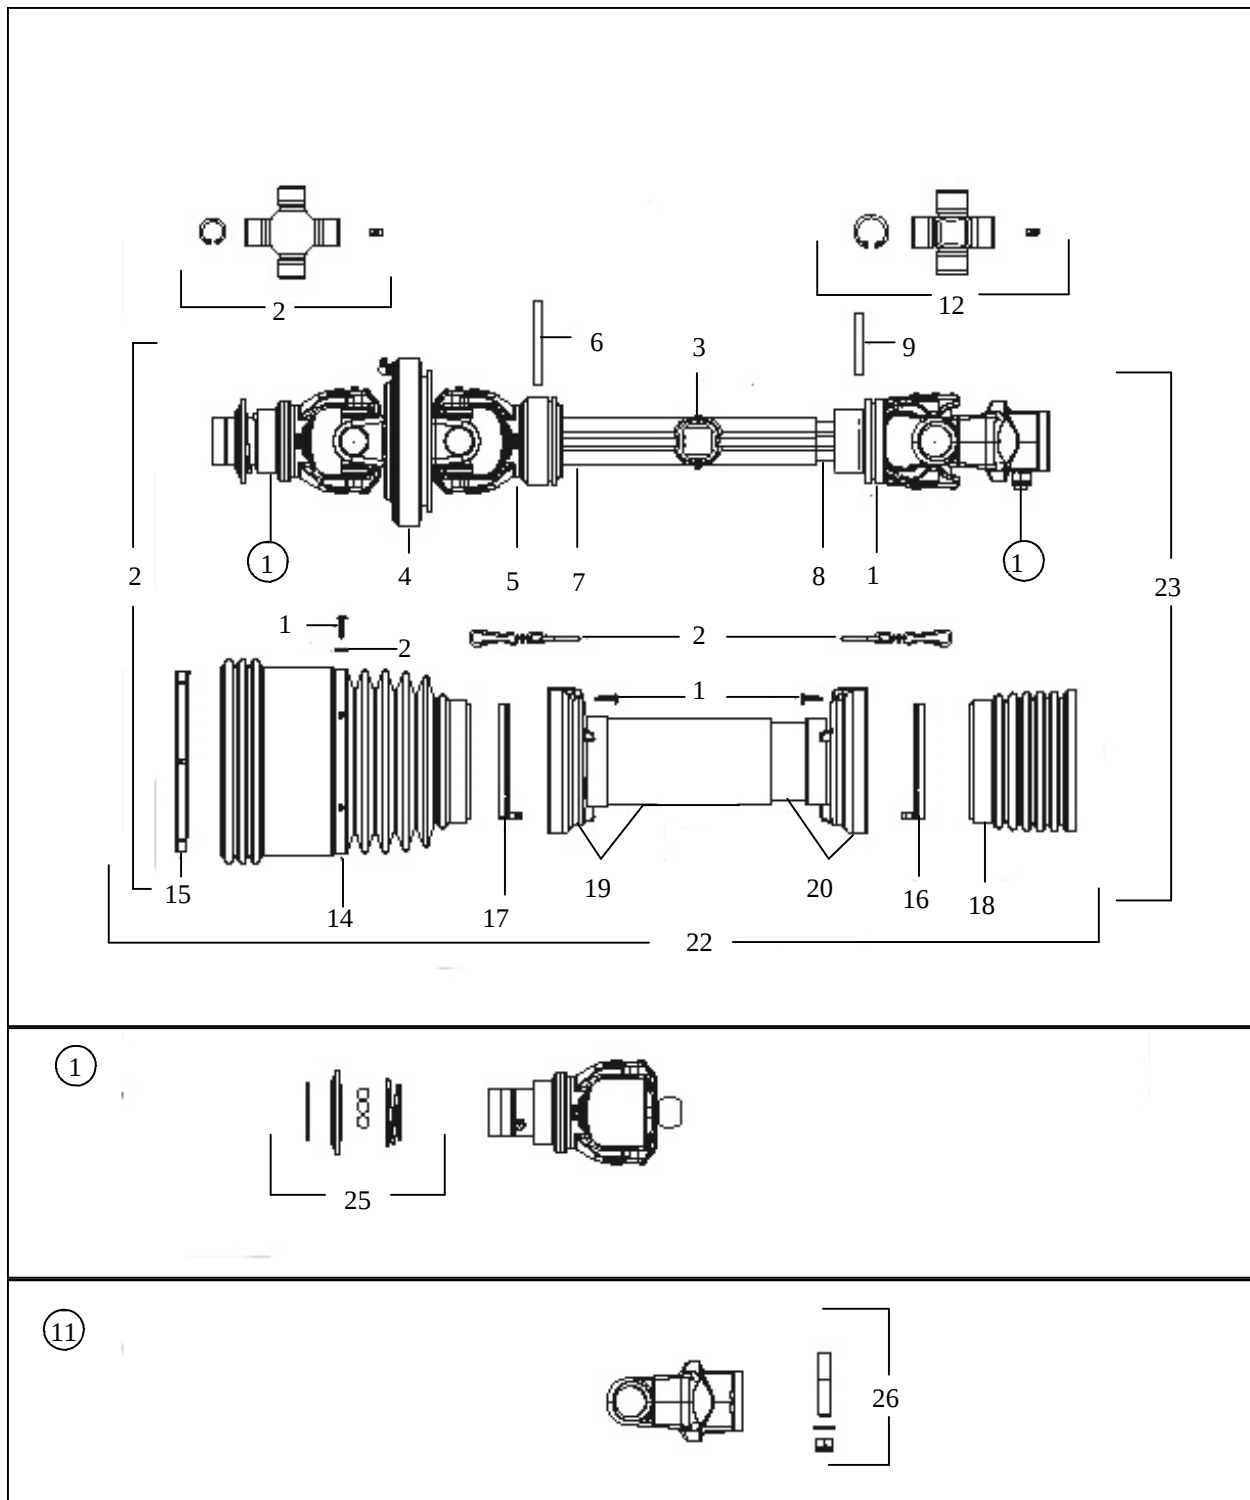

4940 C.V. Drive Shaft Parts List


Ref. No.	Part No.	Description	Qty
1	4917	Slide Collar CV Yoke 1-3/86	1
2	4918	CV Cross Kit	2
3	4937	Grease Fitting	2
4	4919	CV Body	1
5	4943	Outer Tube Yoke	1
6	4921	Outer Roll Pin	1
7	4944	Outer Tube (Steel)	1
8	4923	Inner Tube (Steel)	1
9	4145	Inner Roll Pin	1
10	3923	Tube, Yoke, Inner	1
11	4945	Yoke 1 3/46 z20	1
12	4926	Cross Kit	1
13	3928	Shield Screw	12
14	4946	Shield Cone	1
15	4927	Shield Support	1
16	4909	Shield Support Inner	1
17	4904	Shield Support Outer	1
18	4947	Safety Shield	1
19	4929	Outer Shield Tube	1
20	4930	Inner Shield Tube	1
21	3931	Shield Safety Chain	2
22	4931	Complete Shield Assembly	1
23	4948	CV Half Shaft Complete	1
24	4949	Inner Half Shaft Complete	1
25	4934	Ball Collar Kit	1
26	4950	Taper Pin Kit	1
27	4938	Washer M5	6

 Center & Right Wing Rotor Bar Assembly

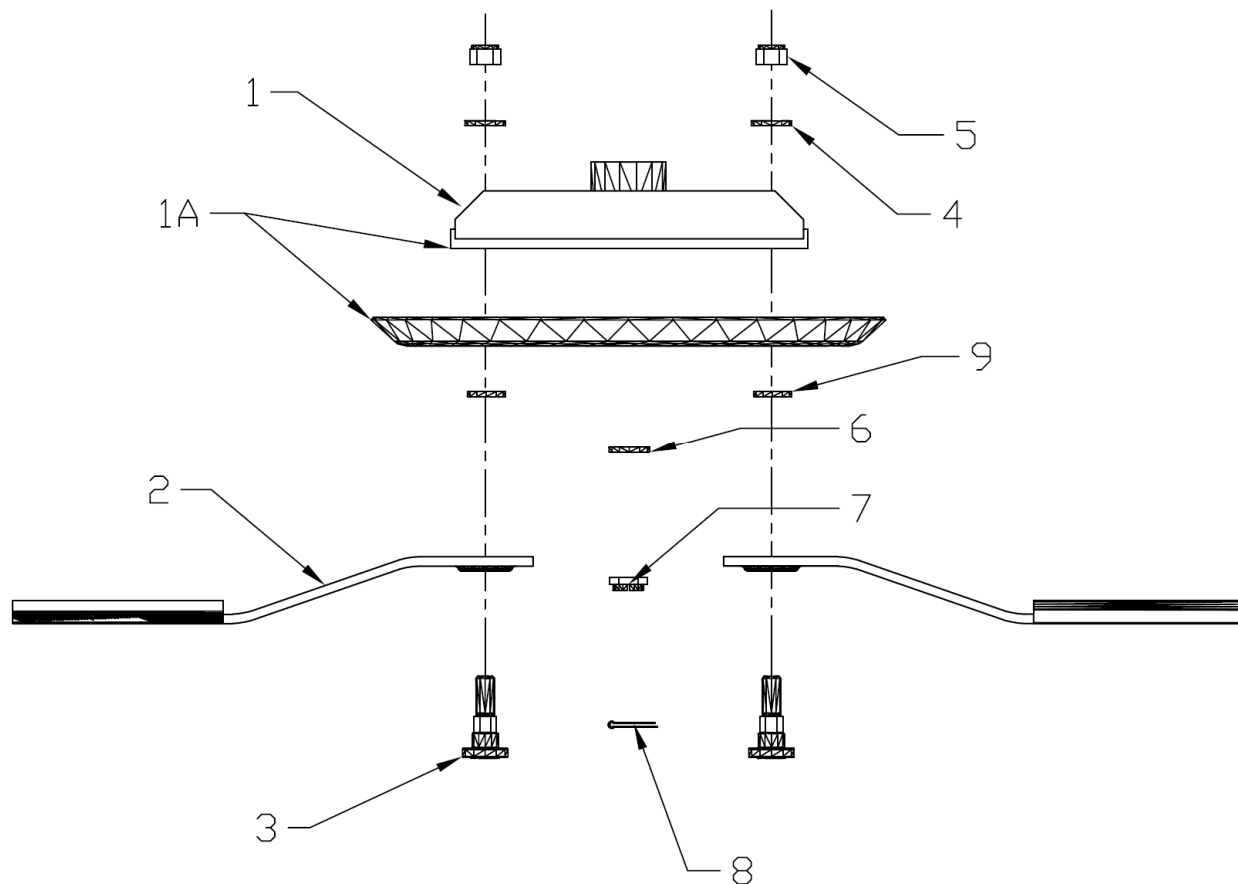


Ref. No.	Part No.	Description	Qty	Remarks
1	3464	Blade Bar	1	
1A	3465	Center Blade Bar with Stump Jumper	REF	
2	3093	Updraft Blade, CCW	2	Center and Right Wing
3	3095	Bolt	2	
4	2106	Washer	2	
5	2105	Nut	2	
6	1420	Output Shaft Washer	1	
7	1421	Output Shaft Nut	1	
8	1422	Cotter Pin	1	
9	3096	Washer	2	Only needed when using Stump Jumper

 Left Wing Rotor Bar Assembly

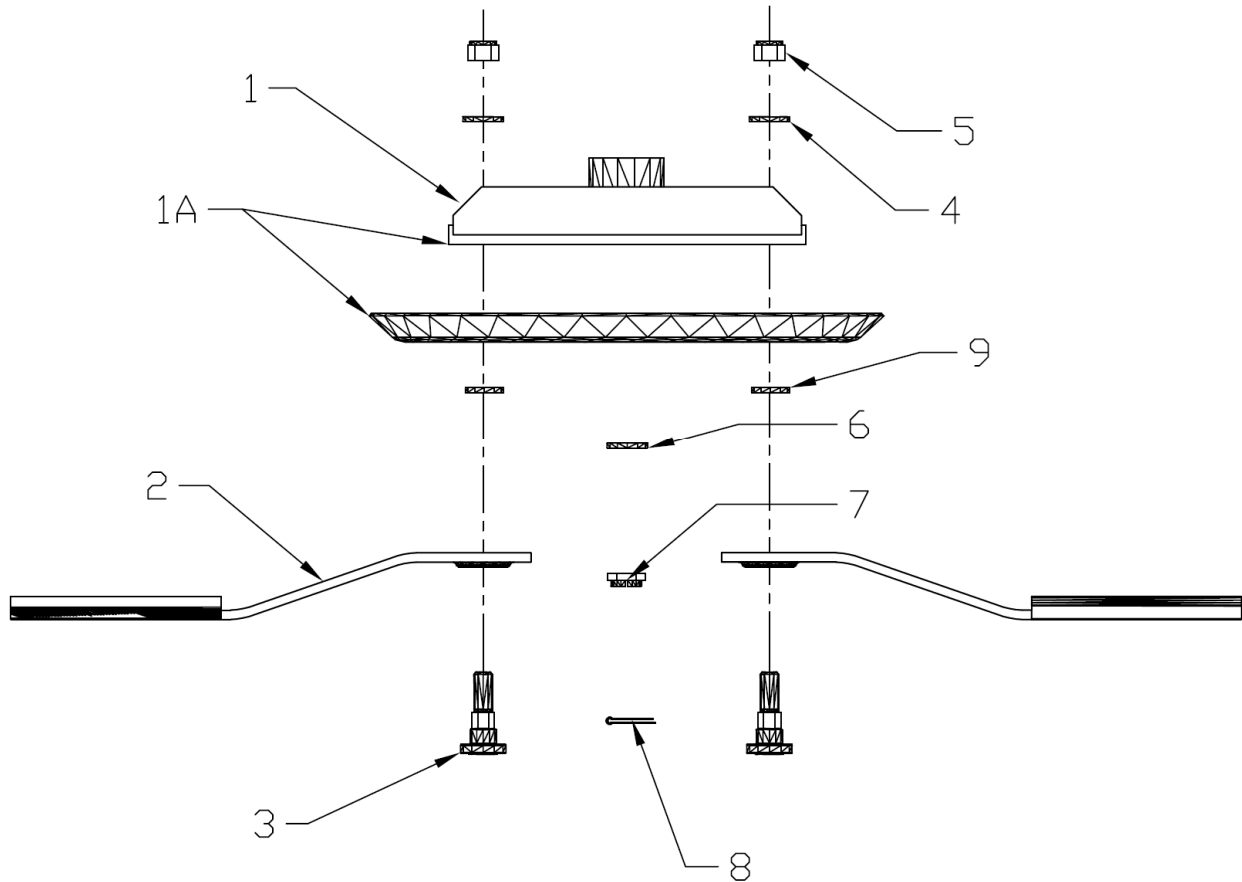


Ref. No.	Part No.	Description	Qty	Remarks
1	3464	Blade Bar	1	
1A	3465	Wing Blade Bar with Stump Jumper	REF	
2	3094	Updraft Blade, CW	2	Left Wing
3	3095	Bolt	2	
4	2106	Washer	2	
5	2105	Nut	2	
6	1420	Output Shaft Washer	1	
7	1421	Output Shaft Nut	1	
8	1422	Cotter Pin	1	
9	3096	Washer	2	Only needed when using Stump Jumper

 3409 Level Rod Assembly

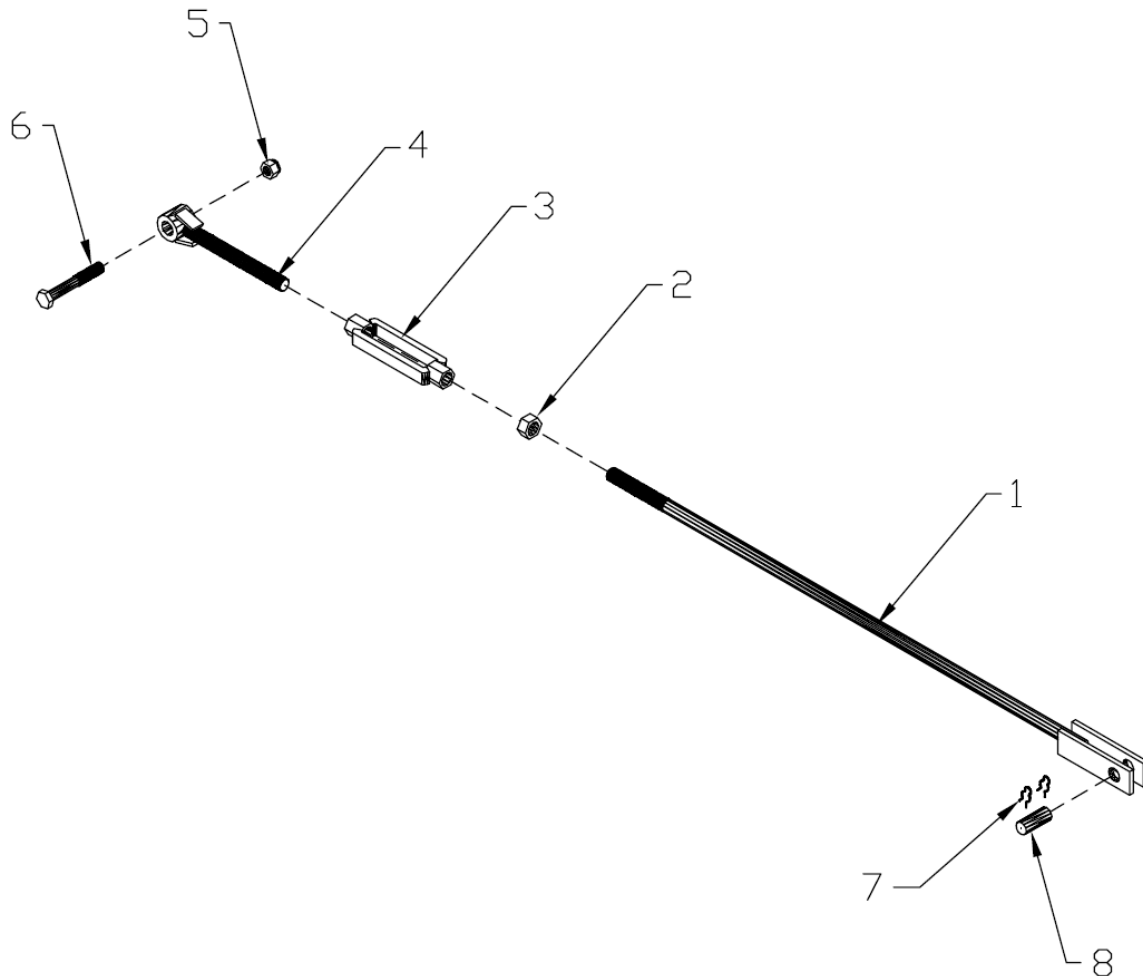


Ref. No.	Part No.	Description	Qty
1	3476	Front Level Rod	1
2	2322	Nut	1
3	2321	Turnbuckle	1
4	2320	Rear Level Rod	1
5	2638	Nut	1
6	2624	Bolt	1
7	2313	Cotter Pin	2
8	2315	Pin	1

 Center Pivot and Axle Arm Assembly

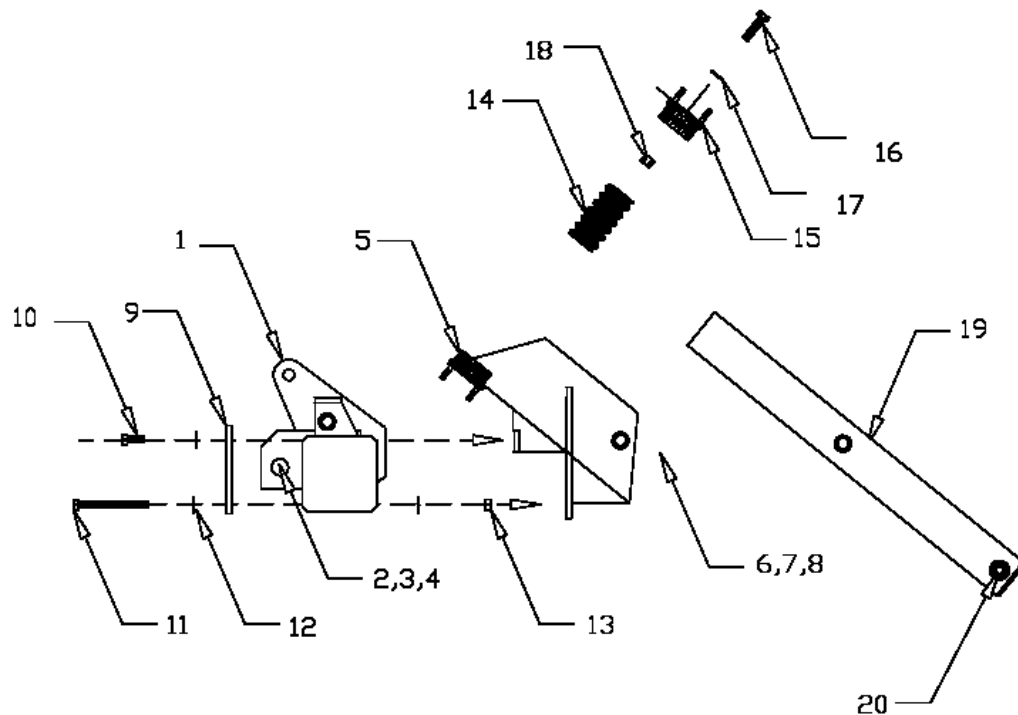


Ref. No.	Part No.	Description	Qty
1	3410	Center Pivot	1
2	2626	Bolt	2
3	2638	Nut	2
4	2106	Washer	2
5	5041	Center Axle Arm Mounting Assembly	2
6	2626	Bolt	2
7	2638	Nut	2
8	2106	Washer	2
9	3452	Mounting Plate	2
10	3659	Bolt	4
11	3453	Bolt	4
12	3718	Washer	8
13	3148	Nut	8
14	3454	Spring	4
15	5042	Center Spring Retainer Bracket	2
16	3661	Bolt	2
17	3718	Washer	2
18	3148	Nut	2
19	5040	Center Axle Arm Assembly	2
20	3358	Dual Spindle Only	1

 Wing Pivot and Axle Arm Assembly

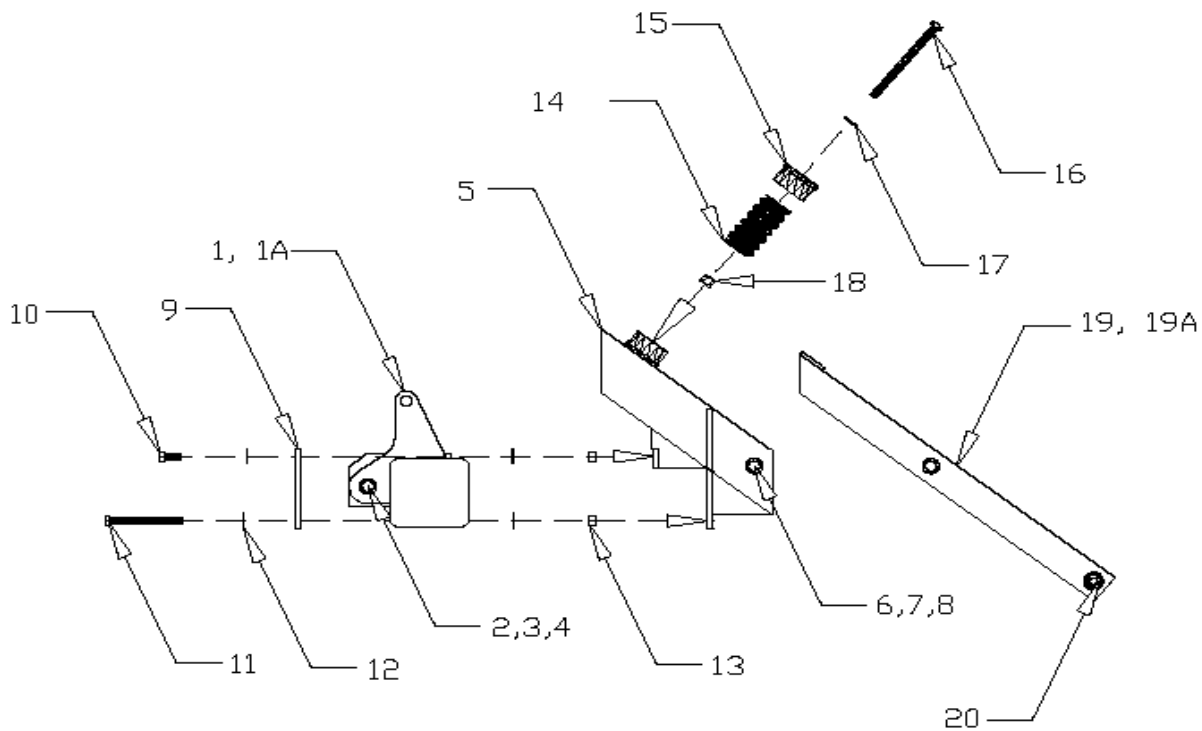


Ref. No.	Part No.	Description	Qty
1	3458	Right Wing Pivot	1
1A	4411	Left Wing Pivot	1
2	2626	Bolt	2
3	2638	Nut	2
4	2106	Washer	2
5	3459	Axle arm Mounting Bracket	1
6	2626	Bolt	1
7	2638	Nut	1
8	2106	Washer	1
9	3452	Mounting Plate	1
10	3659	Bolt	2
11	3453	Bolt	2
12	3718	Washer	4
13	3148	Nut	4
14	3454	Spring	1
15	3460	Spring Cap	1
16	3661	Bolt	1
17	3718	Washer	1
18	3148	Nut	1
19	3411	Left Wing Axle Arm	1
19 A	3412	Right Wing Axle Arm	1
20	3358	Dual Spindle Only	1

 2448 Hub Assembly

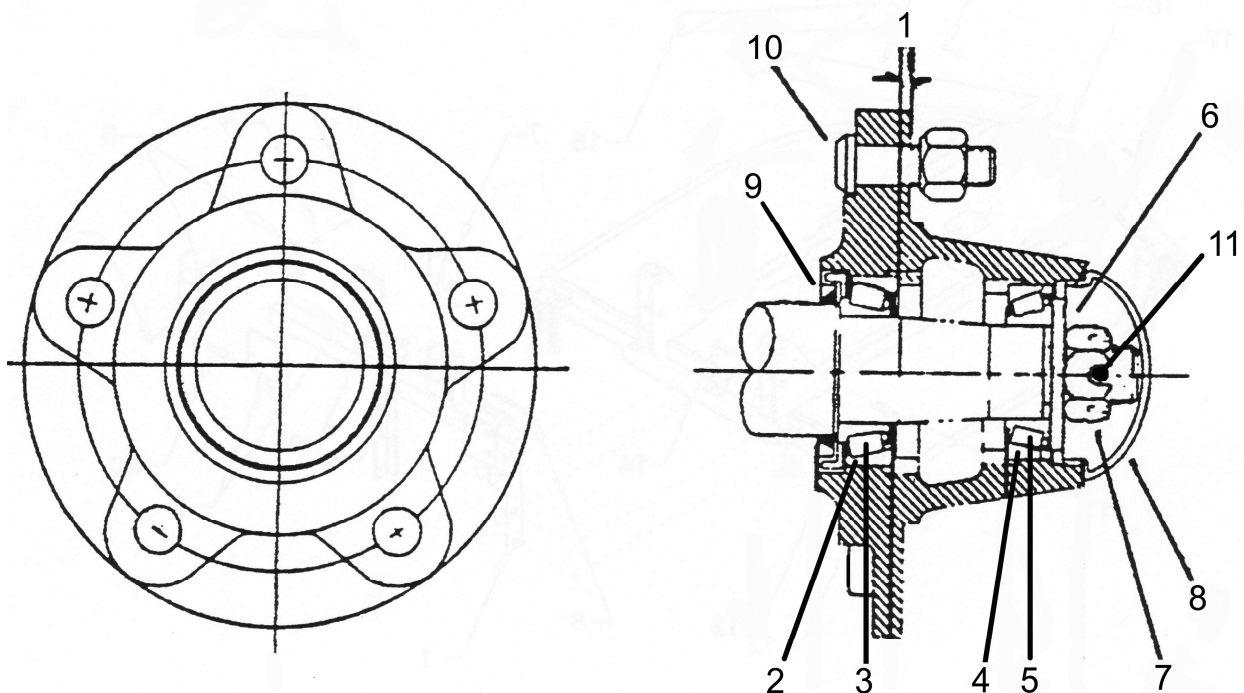


Ref. No.	Part No.	Description	Qty	Remarks
	2448	Complete Hub Assembly	REF	Includes Items 2-5,9,10
1	2449	Hub with Cups and Studs only	1	
2	2450	Inner Race	1	
3	2451	Inner Bearing	1	
4	2452	Outer Race	1	
5	2453	Outer Bearing	1	
6	3359	Spindle Washer	1	
7	3372	Spindle Nut	1	
8	2456	Dust Cap	1	
9	2457	Seal	1	
10	2458	Stud Bolt with Nut	5	
11	3360	Cotter Pin	1	
12	3917	Grease fitting	1	

 3486 Center Lift Cylinder for Rephasing System

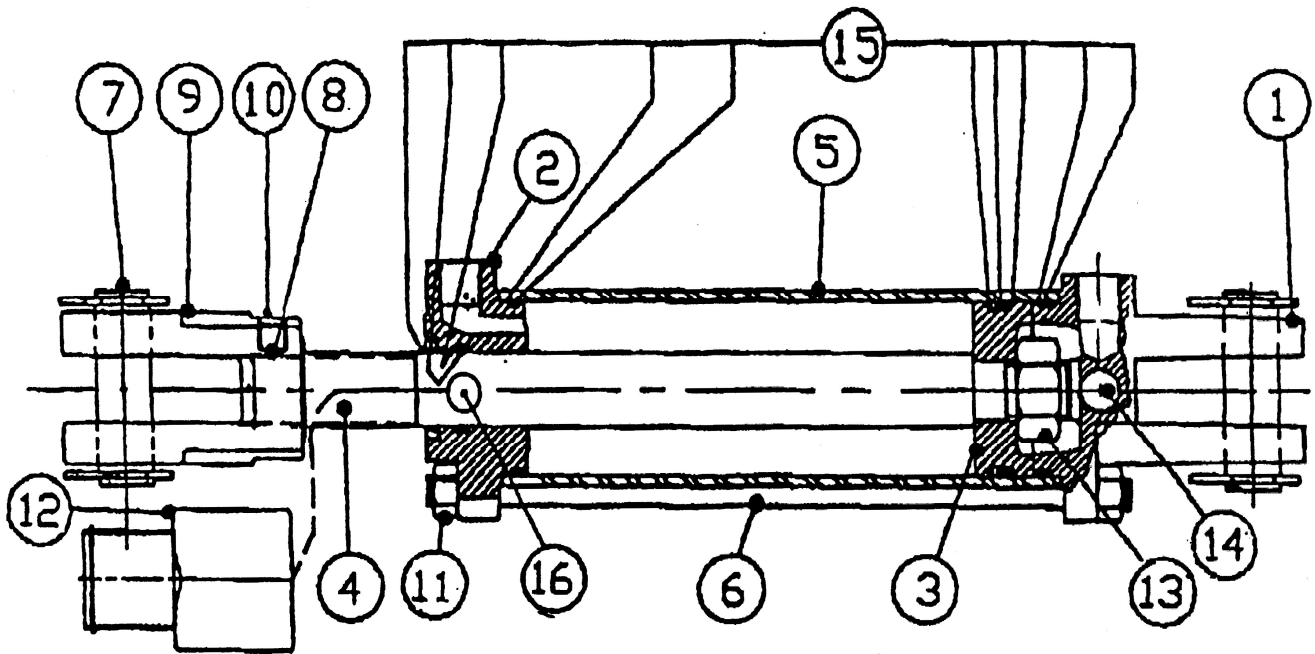


Ref. No.	Part No.	Description	Qty
1	3487	Clevis Cap	1
2	3488	Rod Cap	1
3	3489	Piston	1
4	3490	Rod	1
5	3491	Tube	1
6	3492	Tie Rod	4
7	2330	Pin	2
8	2656	Third Lock	1
9	3493	Rod Clevis	1
10	2658	Set Screw	1
11	2659	Nut	8
12	2374	Stroke Control Kit	1
13	2660	Piston Nut	1
14	2466	Vent Plug	1
15	3494	Seal Kit	1
16	2465	Restrictor	1

 Center Lift Cylinder Mounting Point

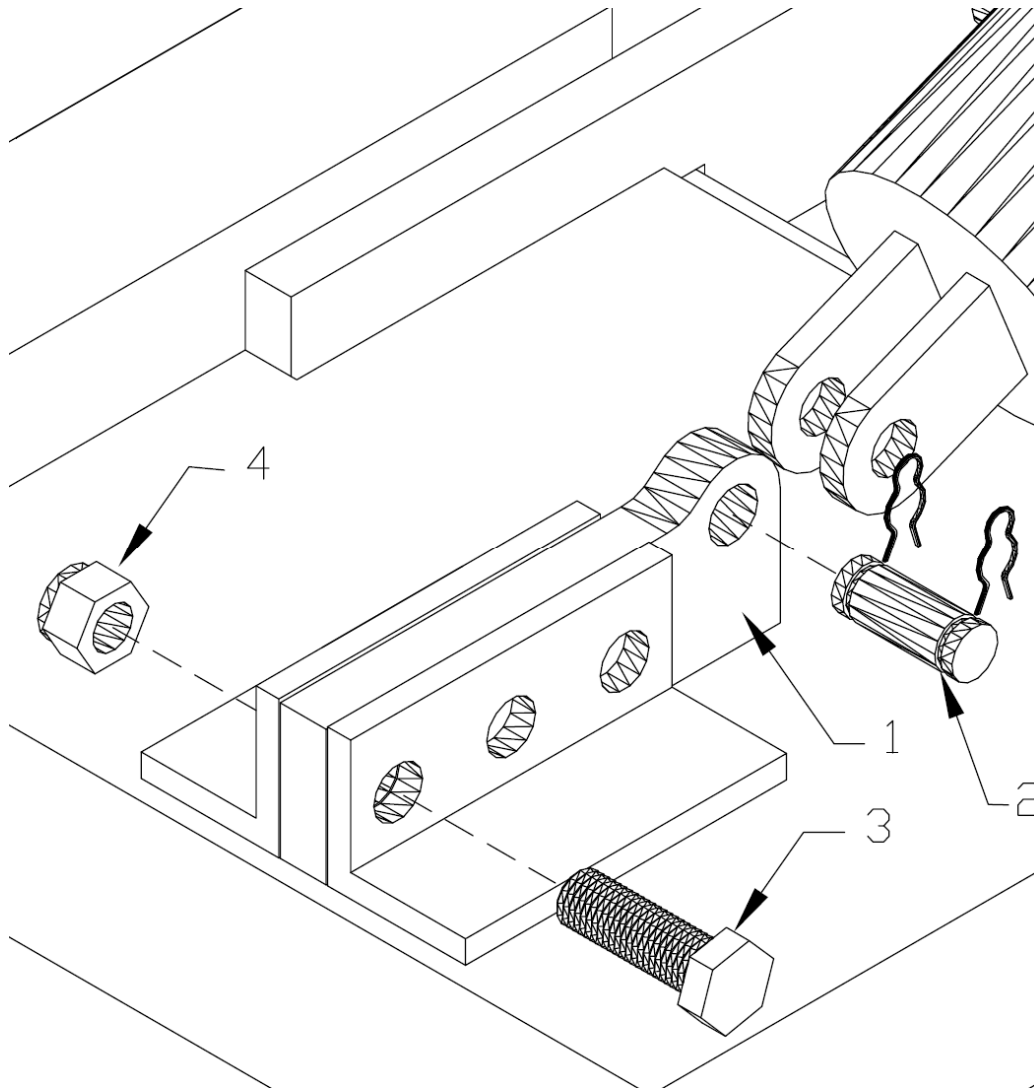


Ref. No.	Part No.	Description	Qty
1	3602	Mounting Block	1
2	2330	Pin with Hair Pins	1
3	5082	Bolt	1
4	2105	Nut	1

 4979 Wing Lift Cylinder

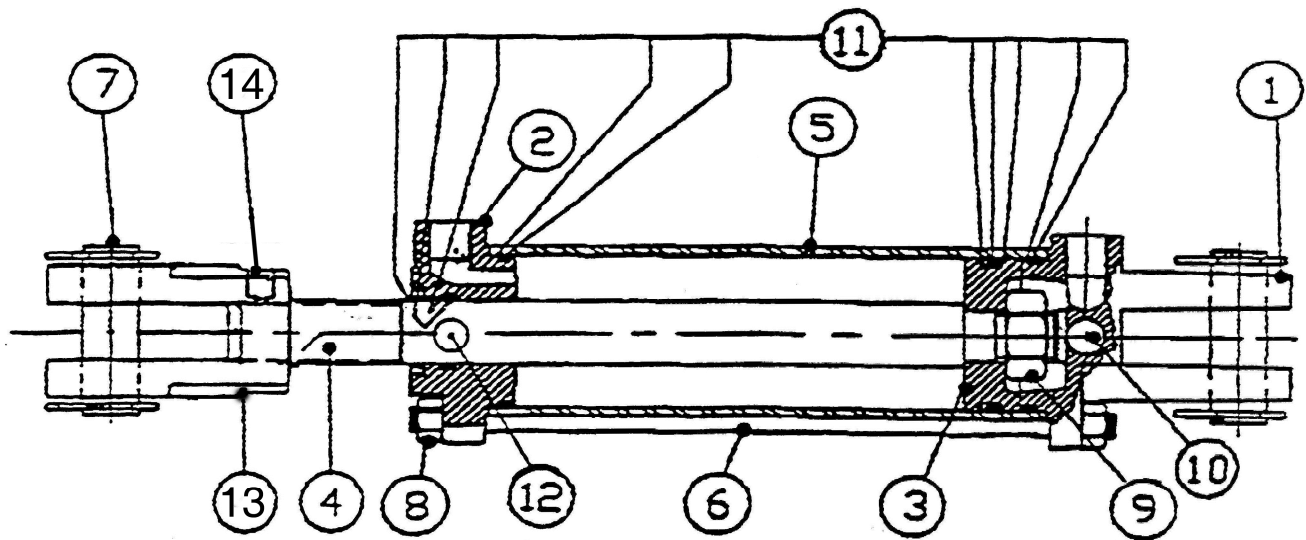


Ref. No.	Part No.	Description	Qty
1	4980	Clevis Cap	1
2	4981	Rod Cap	1
3	4982	Piston	1
4	4880	Rod	1
5	4983	Tube	1
6	4984	Tie Rod	4
7	2330	Pin	2
8	4985	Nut	8
9	2660	Piston Nut	1
10	4986	Vent Plug	1
11	3501	Seal Kit	1
12	2465	Restrictor	1
13	4881	Rod, Clevis	1
14	4882	Set Screw	1

 Travel Bar Assembly

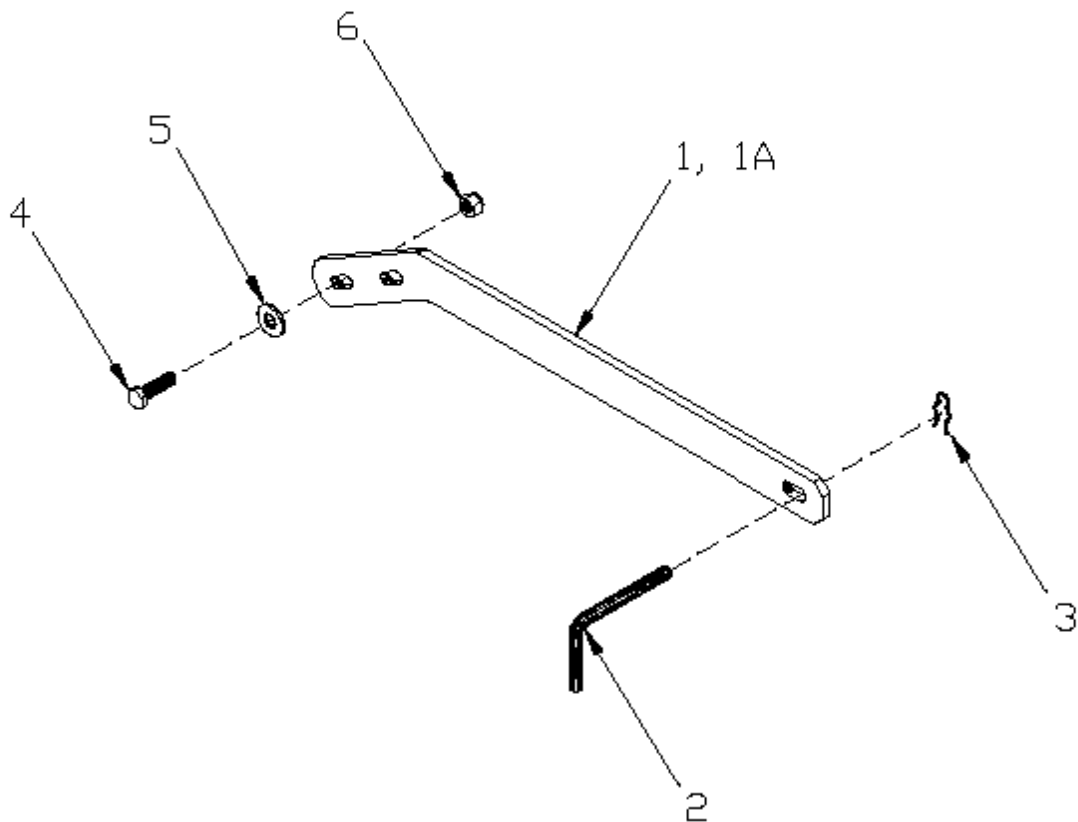


Ref. No.	Part No.	Description	Qty
1	5076	Travel Bar Left Wing	1
1A	5077	Travel Bar Right Wing	1
2	3656	Pin	1
3	2372	Hair Pin	1
4	3659	Bolt	1
5	2337	Washer	1
6	2336	Nut	1

 Center Skid Shoe Assembly

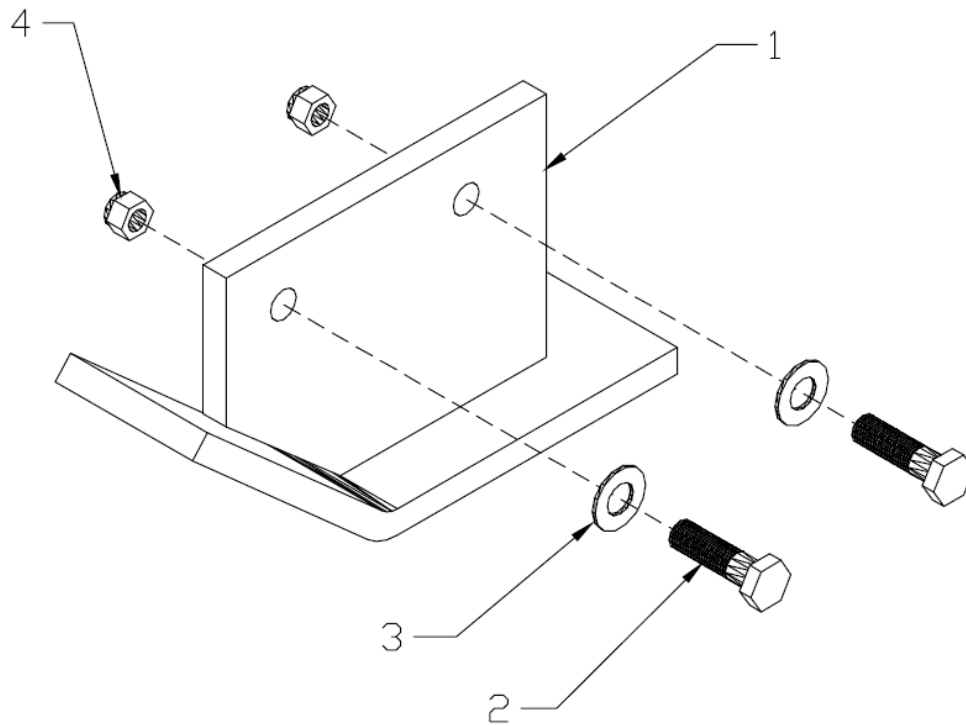


Ref. No.	Part No.	Description	Qty
1	3502	Skid Shoe	1
2	2335	Bolt	2
3	2337	Washer	2
4	2336	Nut	2

 Wing Skid Shoe Assembly

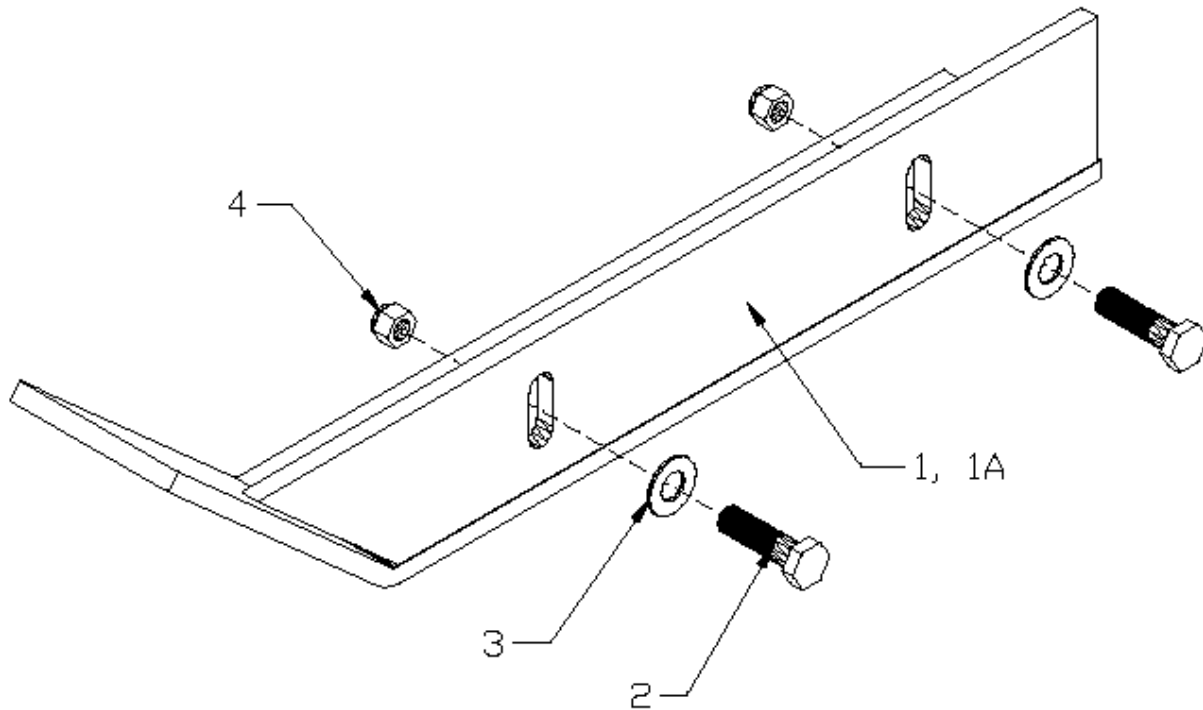

Ref. No.	Part No.	Description	Qty
1	2201	Right Hand Skid Shoe	1
1 A	2202	Left Hand Skid Shoe	1
2	2335	Bolt	2
3	2337	Washer	2
4	2336	Nut	2

 Hydraulic Hose Plan for Rephasing Cylinder System

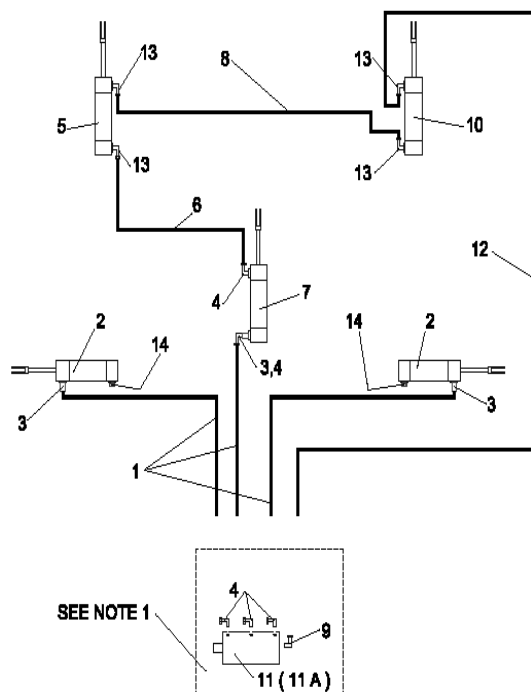


NOTE 1
USE THIS CONFIGURATION WHEN THEY ARE 3 SEPARATE REMOTES ON THE FENDER MOUNTED VALVE.

NOTE 2
THE REPHASING KIT ITEM 15 IS USED WHEN CHANGING FROM THE REGULAR HYDRAULIC SYSTEM (DIAGRAM) TO THE HYDRAULIC SYSTEM WITH REPHASING CYLINDERS.


Ref. No.	Part No.	Description	Qty	Remarks
1	2344	Hose	3	
2	4979	Wing Cylinder	2	See detail on page 30
3	2465	Restrictor	3	
4	2350	Fitting	2	
5	3478	Right Wing Rephasing Cylinder	1	See detail on page 36
6	2595	Hose	1	
7	3486	Center Rephasing Cylinder	1	See detail on page 28
8	2596	Hose	1	
9	2597	Fitting	1	See NOTE 1
10	3475	Left Wing Rephasing Cylinder	1	See detail on page 37
11	3362	3-Spool Valve (Open Center)	1	See NOTE 1
11 A	3370	3-Spool Valve (Closed Center)	REF	Optional
12	2598	Hose	1	
13	5006	Fiting	4	
14	2466	Vent Plug	2	
15	5007	Rephasing Kit	1	See NOTE 2

 3362 Hydraulic Valve

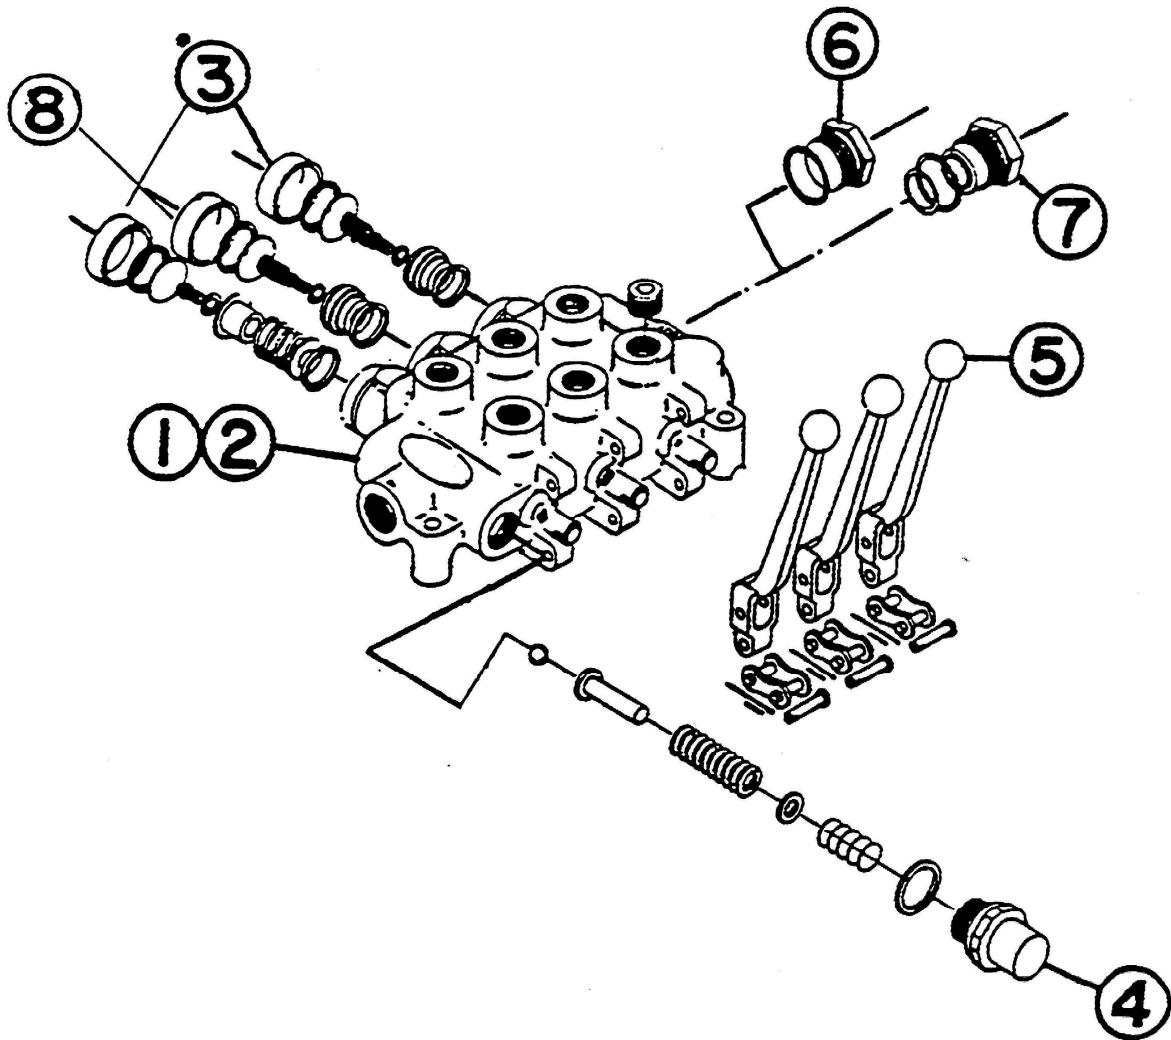


Ref. No.	Part No.	Description	Qty
1	3362	Open Center Valve	1
2	3370	Closed Center Valve	REF
3	3363	Detent Kit	2
4	3364	High Pressure Relief Valve Kit	1
5	3365	Handle Assembly	3
6	3366	Open Center Plug	1
7	3371	Closed Center Plug	REF
8	3367	Spring Repair Kit	1

 3478 Right Wing Rephasing Cylinder

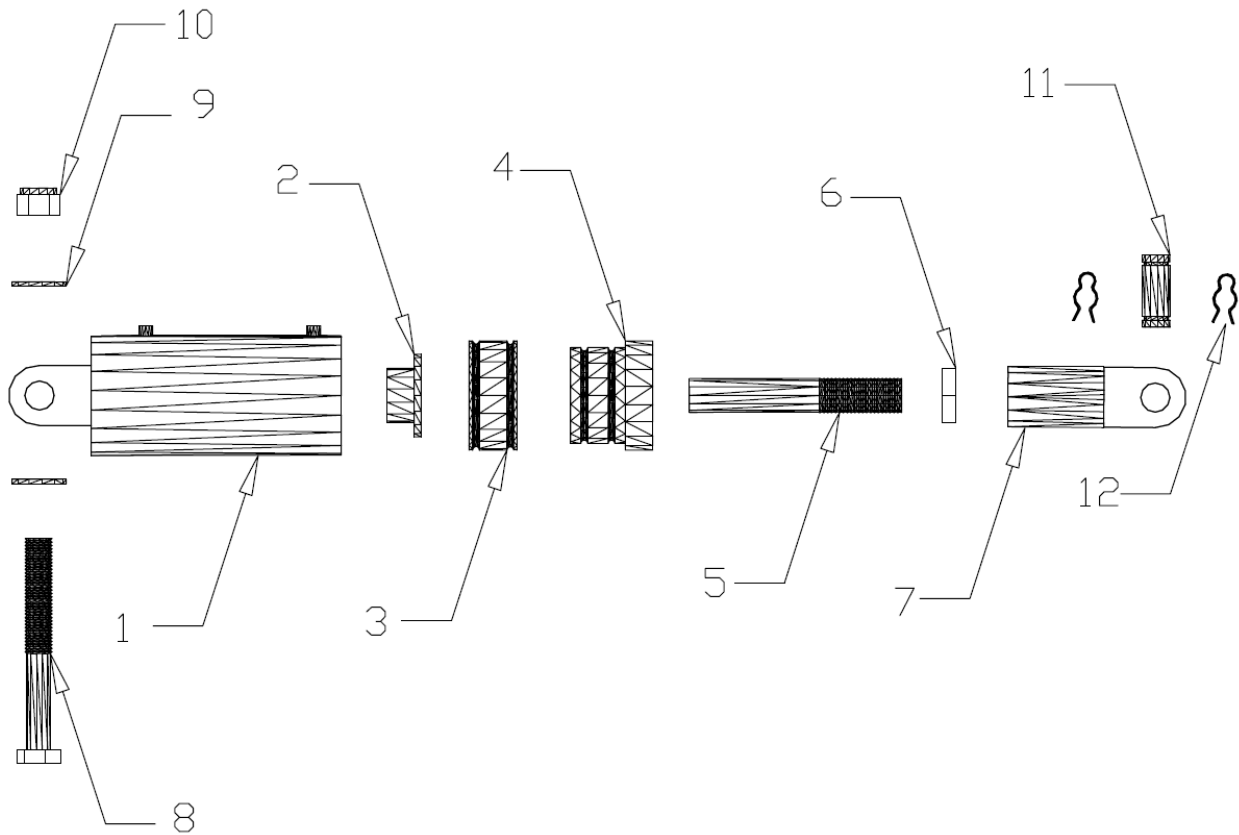


Ref. No.	Part No.	Description	Qty
1	3679	Barrel	1
2	3480	Rod Nut	1
3	3481	Piston	1
4	3482	Gland	1
5	3483	Rod	1
6	3484	Jam Nut	1
7	3485	Clevis	1
8	2626	Bolt	1
9	2106	Washer	2
10	2638	Nut	1
11	2354	Pin	1
12	3270	Clip Pin	2
Not Shown	3854	Seal Kit	1

 3475 Left Wing Rephasing Cylinder

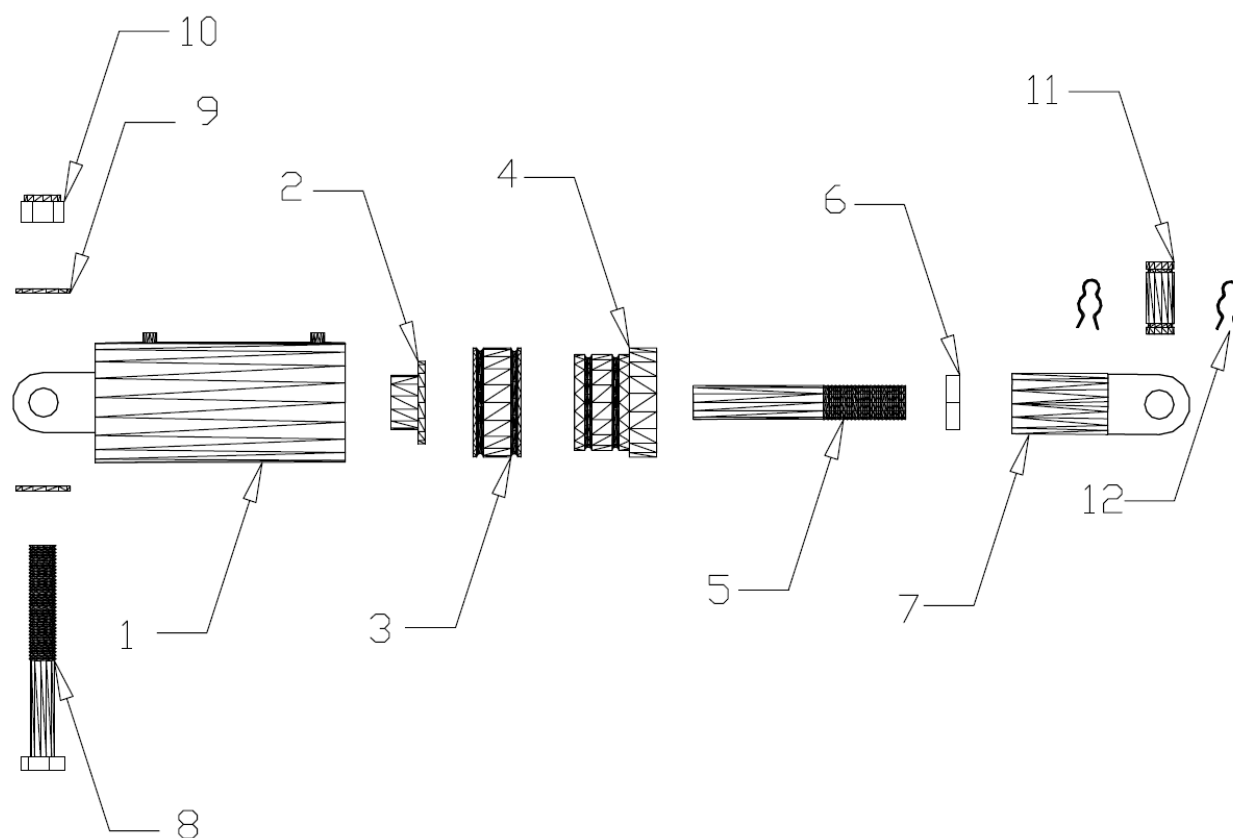


Ref. No.	Part No.	Description	Qty
1	3450	Barrel	1
2	3480	Rod Nut	1
3	3418	Piston	1
4	3419	Gland	1
5	3483	Rod	1
6	3484	Jam Nut	1
7	3485	Clevis	1
8	2626	Bolt	1
9	2106	Washer	2
10	2638	Nut	1
11	2354	Pin	1
12	3270	Clip Pin	2
Not Shown	3855	Seal Kit	1

 Front Center Chain Guard Assembly

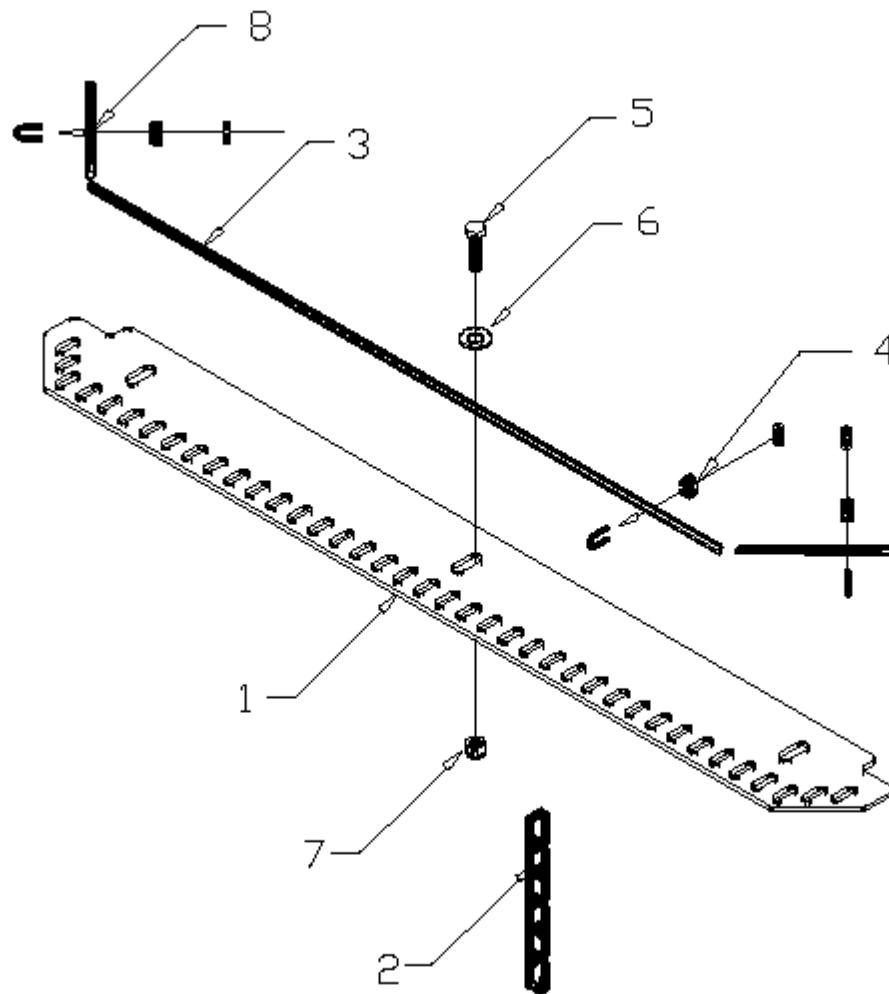


Ref. No.	Part No.	Description	Qty
	3581	Complete Single Curtain Assembly	REF
	3822	Complete Double Curtain Assembly	REF
1	3582	Chain Guard Plate	1
2	3583	Chain Link for Single Curtain	39
Not Shown	3588	Chain Link for Double Curtain	39
3	5135	Rod	1
4	3585	Clamp	3
5	2335	Bolt	3
6	2337	Washer	3
7	2336	Nut	3
8	5129	Rod	2

 Front Center Outside Chain Guard Assembly

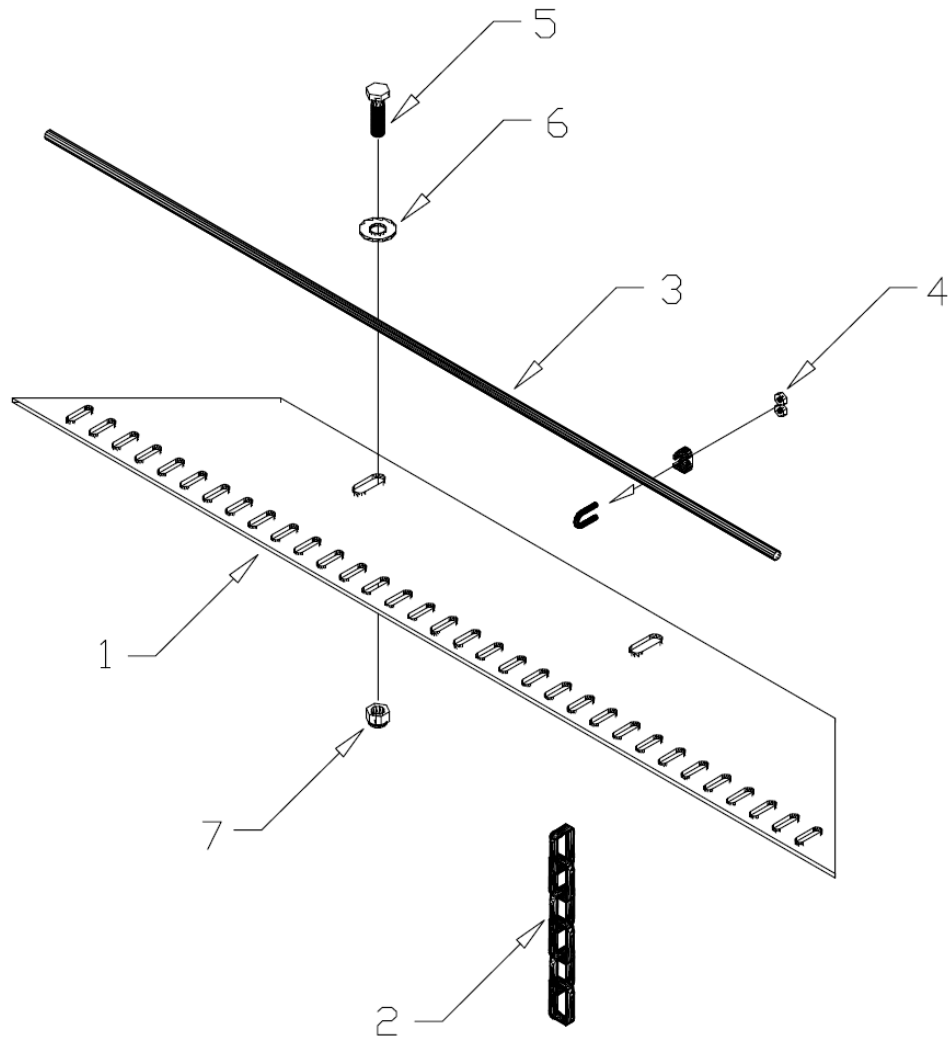


Ref. No.	Part No.	Description	Qty
	3586	Complete Right Single Curtain Assembly	REF
	3823	Complete Right Double Curtain Assembly	REF
	3893	Complete Left Single Curtain Assembly	REF
	3894	Complete Left Double Curtain Assembly	REF
1	3587	Chain Guard Plate	1
2	3583	Chain Link for Single Curtain	30
Not Shown	3588	Chain Link for Double Curtain	30
3	5134	Rod	1
4	3585	Clamp	1
5	2335	Bolt	2
6	2337	Washer	2
7	2336	Nut	2

 Inside Front Wing Chain Guard Assembly

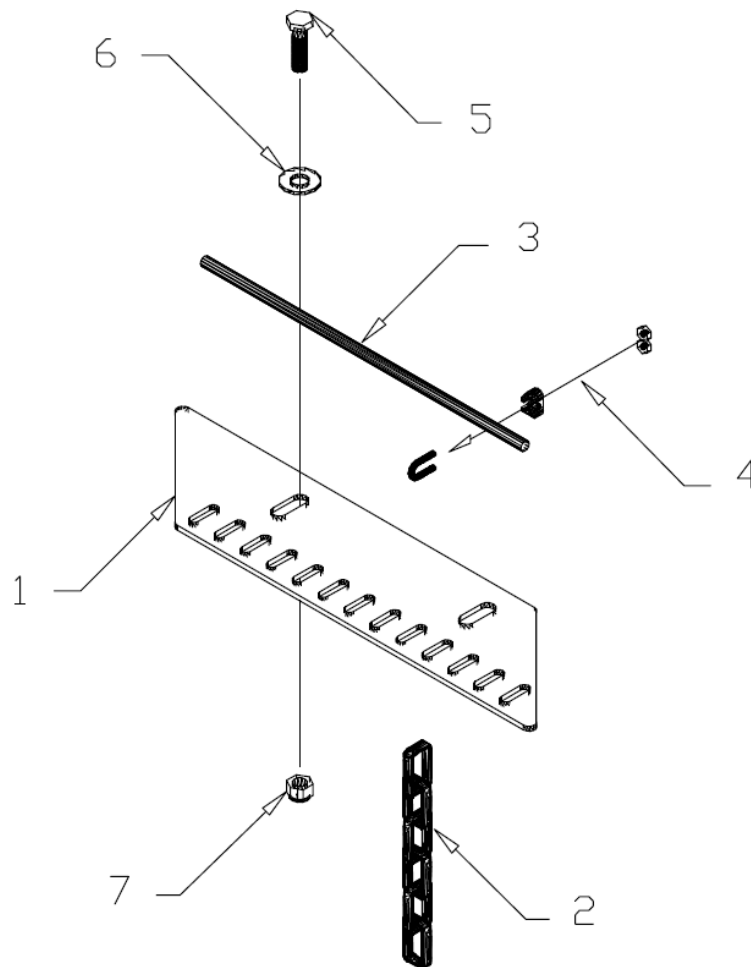


Ref. No.	Part No.	Description	Qty
	3590	Complete Right Single Curtain Assembly	REF
	3824	Complete Right Double Curtain Assembly	REF
	3895	Complete Left Single Curtain Assembly	REF
	3896	Complete Left Double Curtain Assembly	REF
1	3591	Chain Guard Plate	1
2	3583	Chain Link for Single Curtain	13
Not Shown	3588	Chain Link for Double Curtain	13
3	5134	Rod	1
4	3585	Clamp	1
5	2335	Bolt	2
6	2337	Washer	2
7	2336	Nut	2

 Center Front Wing Chain Guard Assembly

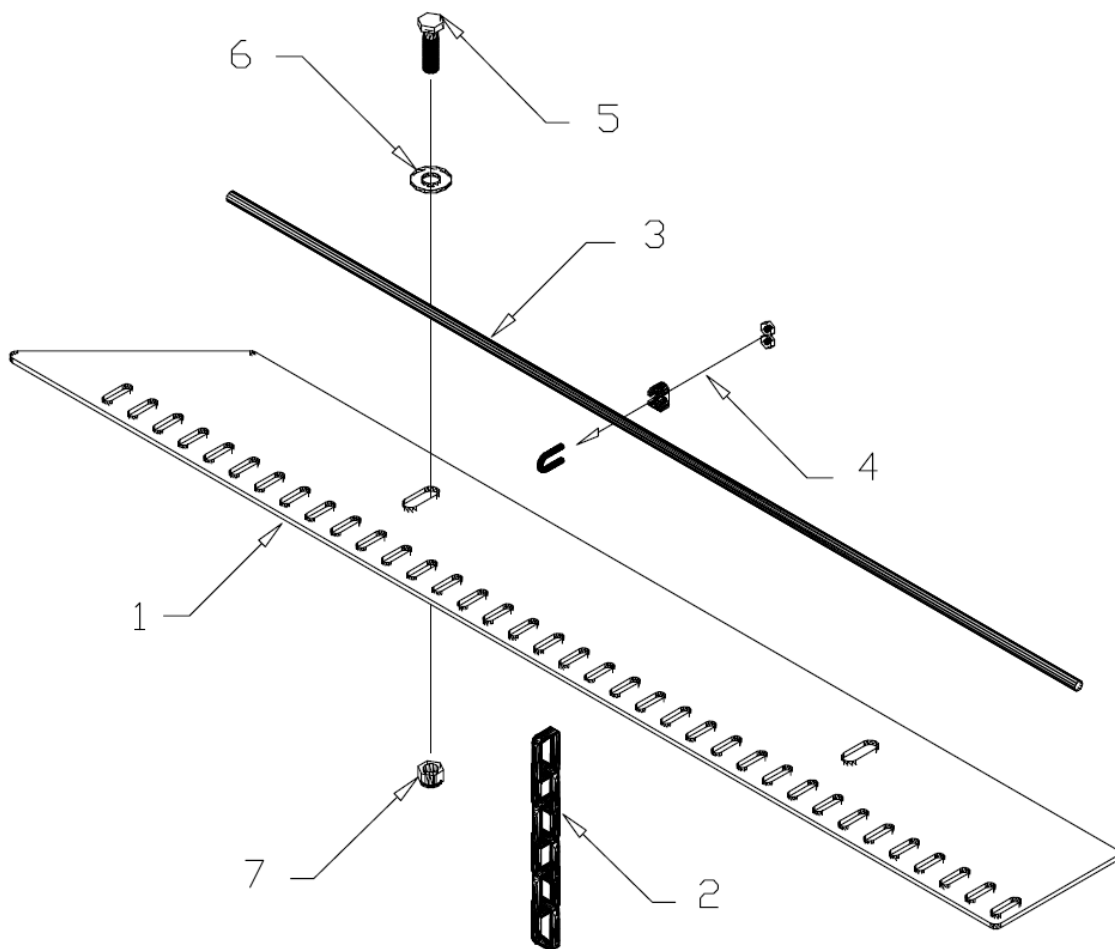


Ref. No.	Part No.	Description	Qty
	3593	Complete Right Single Curtain Assembly	REF
	3825	Complete Right Double Curtain Assembly	REF
	3889	Complete Left Single Curtain Assembly	REF
	3890	Complete Left Double Curtain Assembly	REF
1	3594	Chain Guard Plate	1
2	3583	Chain Link for Single Curtain	36
Not Shown	3588	Chain Link for Double Curtain	36
3	5136	Rod	1
4	3585	Clamp	1
5	2335	Bolt	2
6	2337	Washer	2
7	2336	Nut	2

 Outside Front Wing Chain Guard Assembly

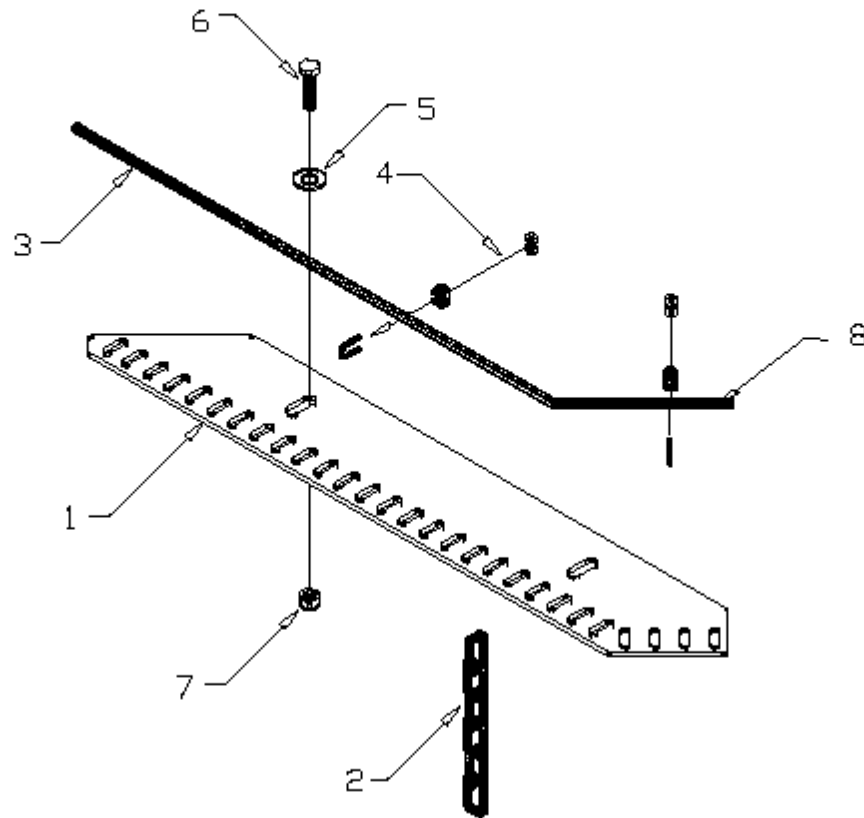


Ref. No.	Part No.	Description	Qty
	3596	Complete Right Single Curtain Assembly	REF
	3826	Complete Right Double Curtain Assembly	REF
	3891	Complete Left Single Curtain Assembly	REF
	3892	Complete Left Double Curtain Assembly	REF
1	3597	Chain Guard Plate	1
2	3583	Chain Link for Single Curtain	28
Not Shown	3588	Chain Link for Double Curtain	28
3	5133	Rod	1
4	3585	Clamp	2
5	2335	Bolt	2
6	2337	Washer	2
7	2336	Nut	2
8	5130	Rod	1

 Rear Center Chain Guard Assembly

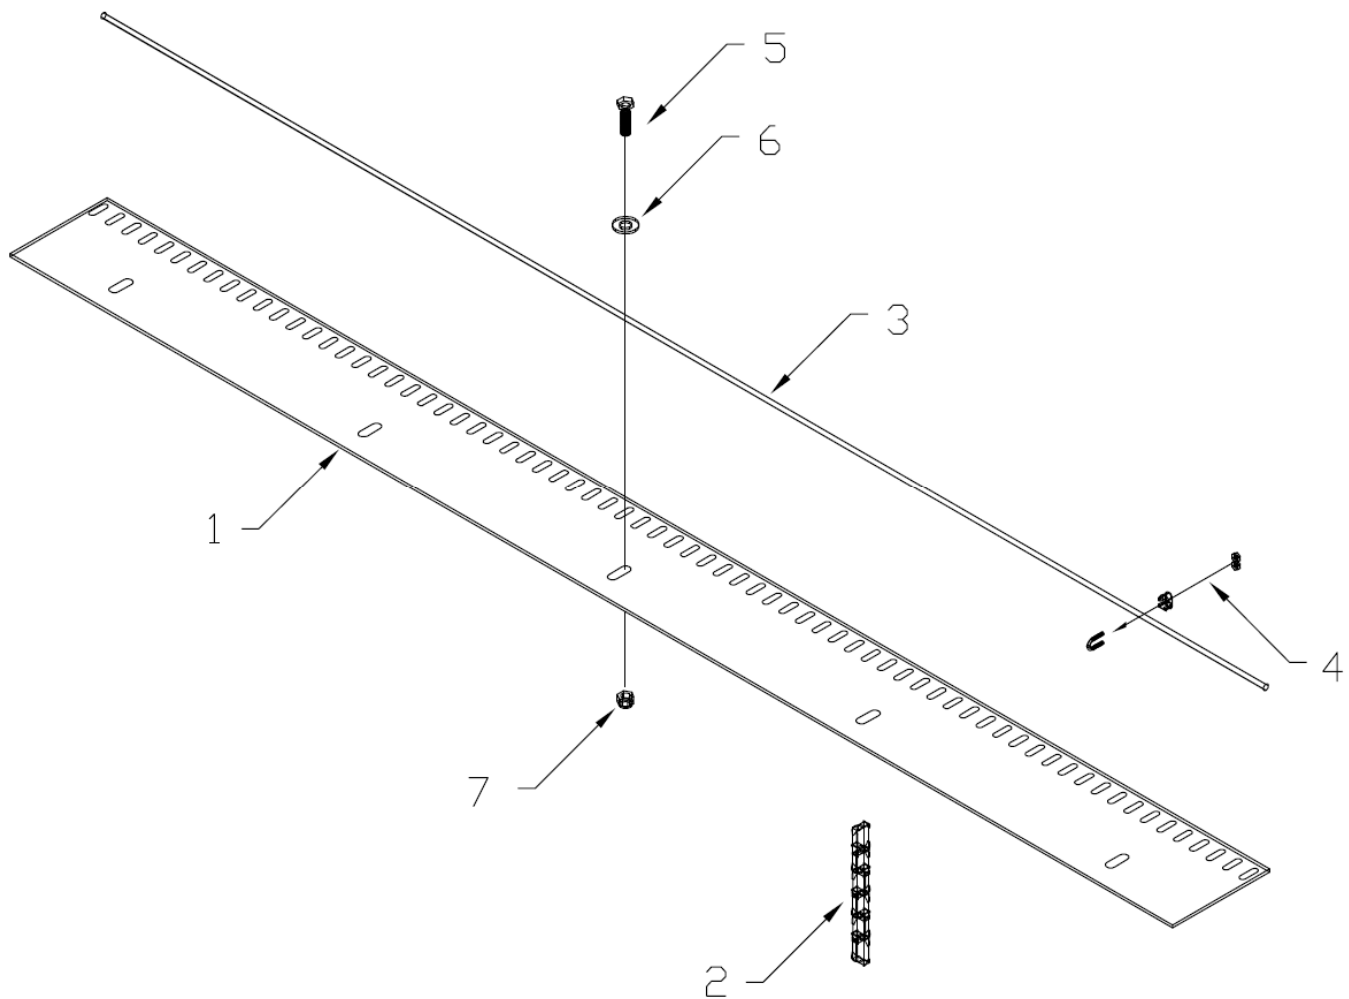


Ref. No.	Part No.	Description	Qty
	3599	Complete Single Curtain Assembly	REF
	3828	Complete Double Curtain Assembly	REF
1	3600	Chain Guard Plate	1
2	3583	Chain Link for Single Curtain	71
Not Shown	3588	Chain Link for Double Curtain	71
3	5138	Rod	1
4	3585	Clamp	1
5	2335	Bolt	5
6	2337	Washer	5
7	2336	Nut	5

 Inside Rear Wing Chain Guard Assembly

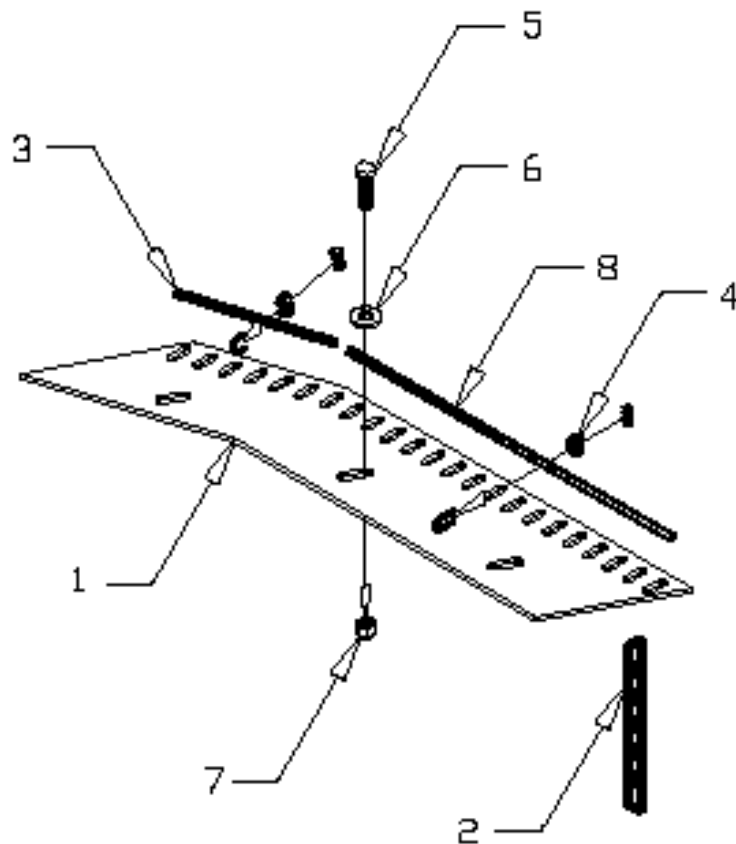


Ref. No.	Part No.	Description	Qty
	3696	Complete Right Single Curtain Assembly	REF
	3829	Complete Right Double Curtain Assembly	REF
	3887	Complete Left Single Curtain Assembly	REF
	3888	Complete Left Double Curtain Assembly	REF
1	3697	Chain Guard Plate	1
2	3583	Chain Link for Single Curtain	22
Not Shown	3588	Chain Link for Double Curtain	22
3	5139	Rod	1
4	3585	Clamp	2
5	2335	Bolt	3
6	2337	Washer	3
7	2336	Nut	3
8	5133	Rod	1

 Outside Rear Wing Chain Guard Assembly

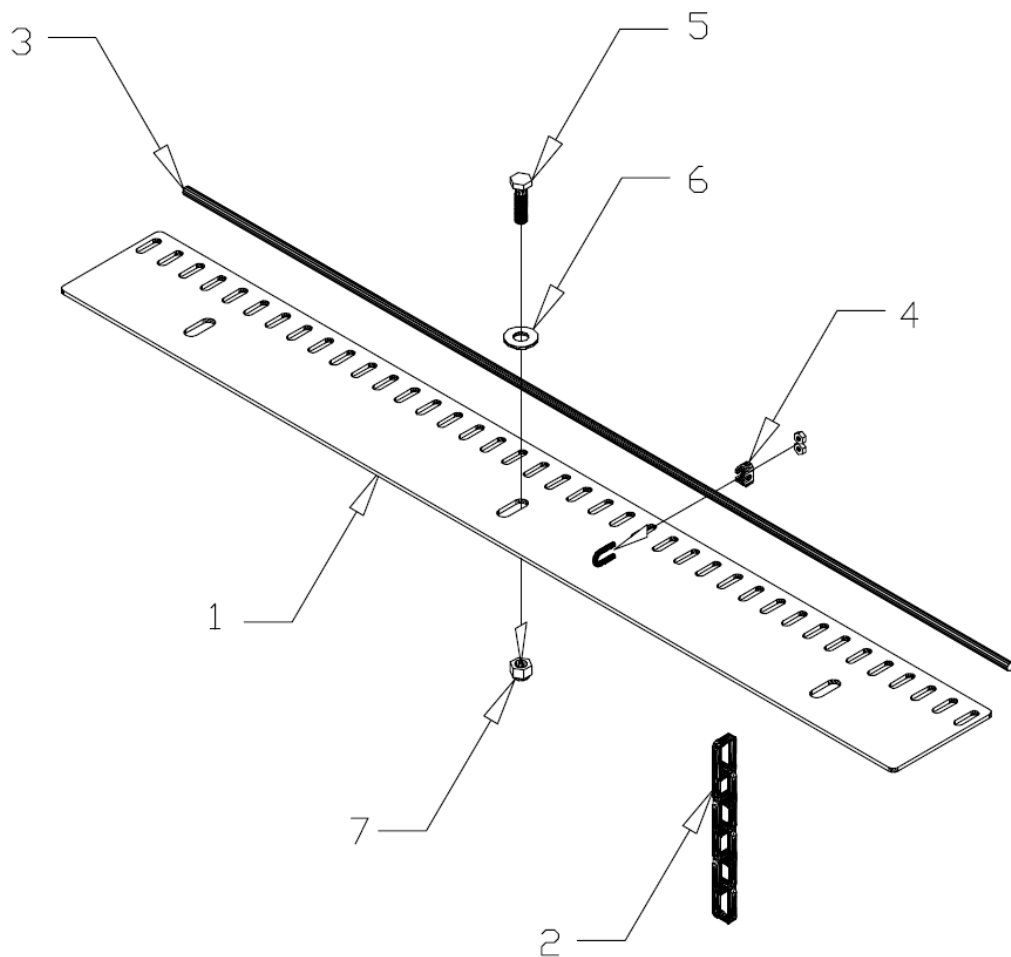


Ref. No.	Part No.	Description	Qty
	3664	Complete Right Single Curtain Assembly	REF
	3830	Complete Right Double Curtain Assembly	REF
	3885	Complete Left Single Curtain Assembly	REF
	3886	Complete Left Double Curtain Assembly	REF
1	3665	Chain Guard Plate	1
2	3583	Chain Link for Single Curtain	39
Not Shown	3588	Chain Link for Double Curtain	39
3	5137	Rod	1
4	3585	Clamp	2
5	2335	Bolt	3
6	2337	Washer	3
7	2336	Nut	3

 Divider Gearbox Shield Assembly

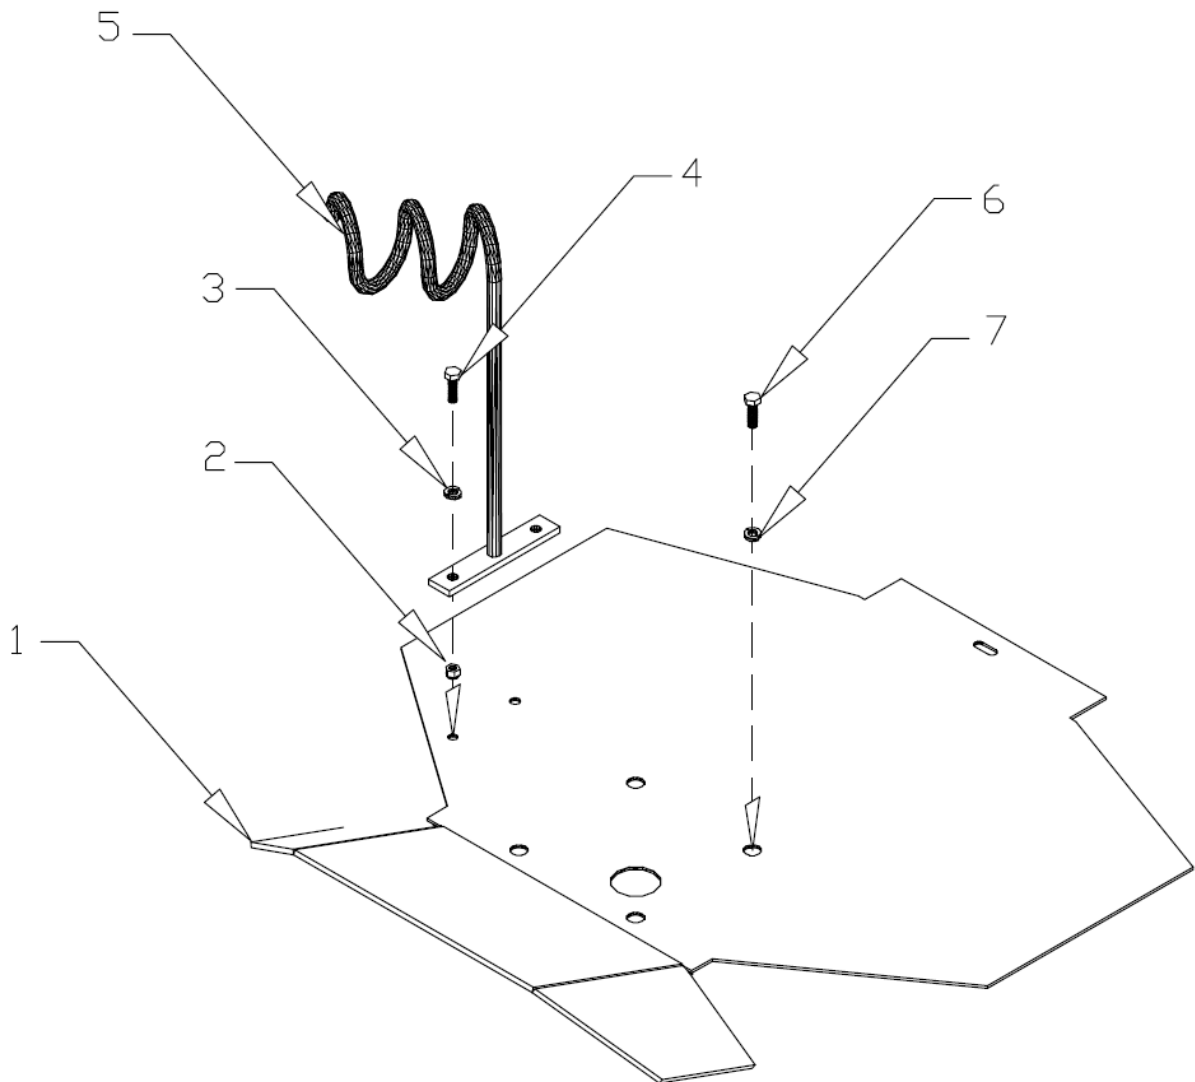


Ref. No.	Part No.	Description	Qty
1	4410	Shield Cover	1
2	2513	Nut	4
3	3415	Washer	2
4	2512	Bolt	2
5	3394	Hose Holder	1
6	2734	Bolt	4
7	2733	Lock Washer	4

 Center Gearbox Shield Assembly

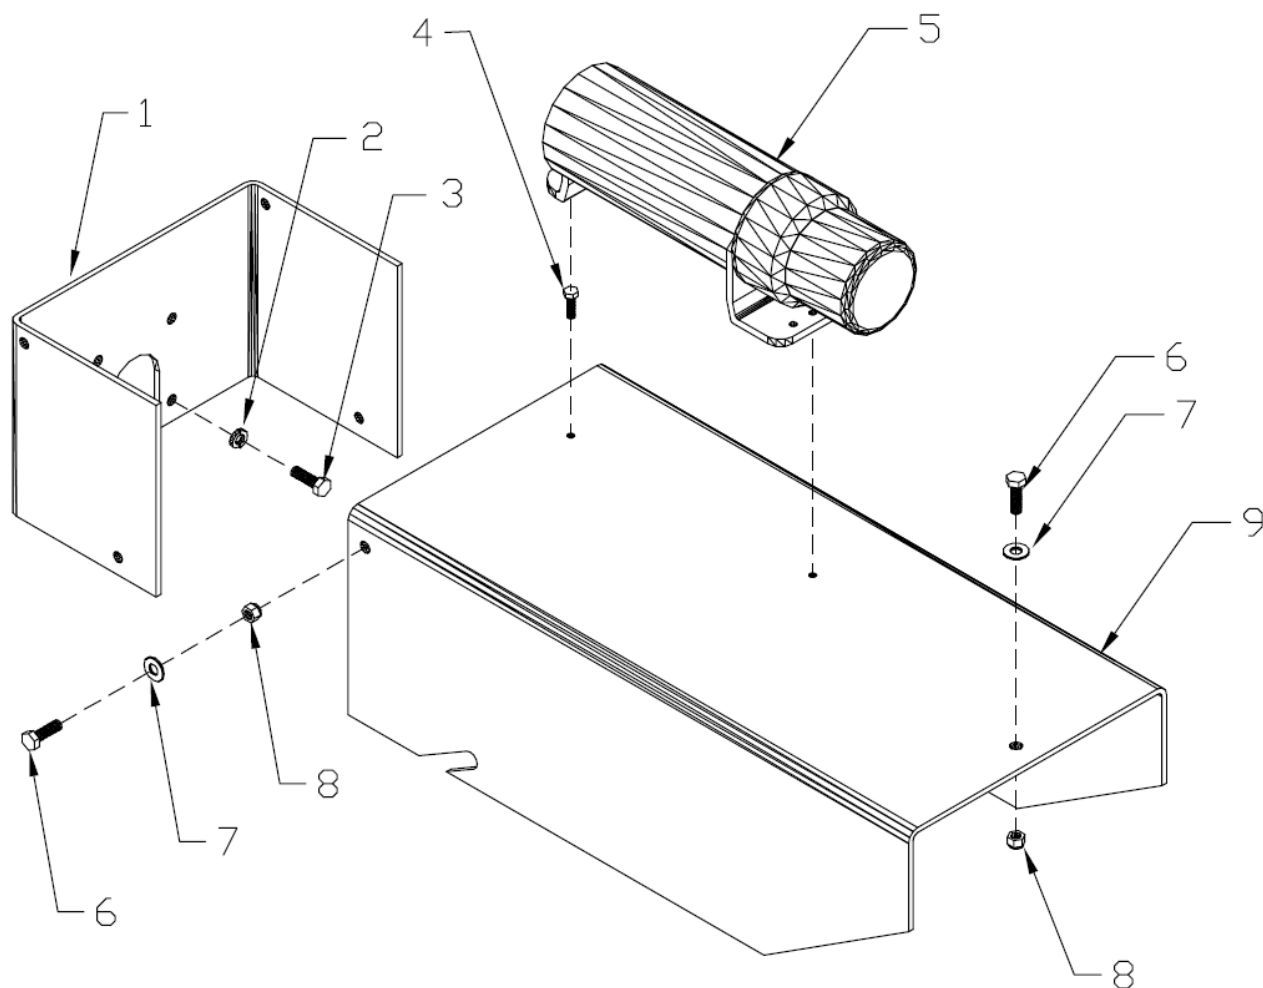

Ref. No.	Part No.	Description	Qty
1	2510	Shield Face Plate	1
2	4305	Lock Washer	4
3	3006	Bolt	4
4	4462	Screw	2
5	4463	Operator's Manual Holder	1
6	2512	Bolt	3
7	3415	Washer	3
8	2513	Nut	3
9	3416	Flip Shield	1

 
Wing Gearbox Shield Assembly

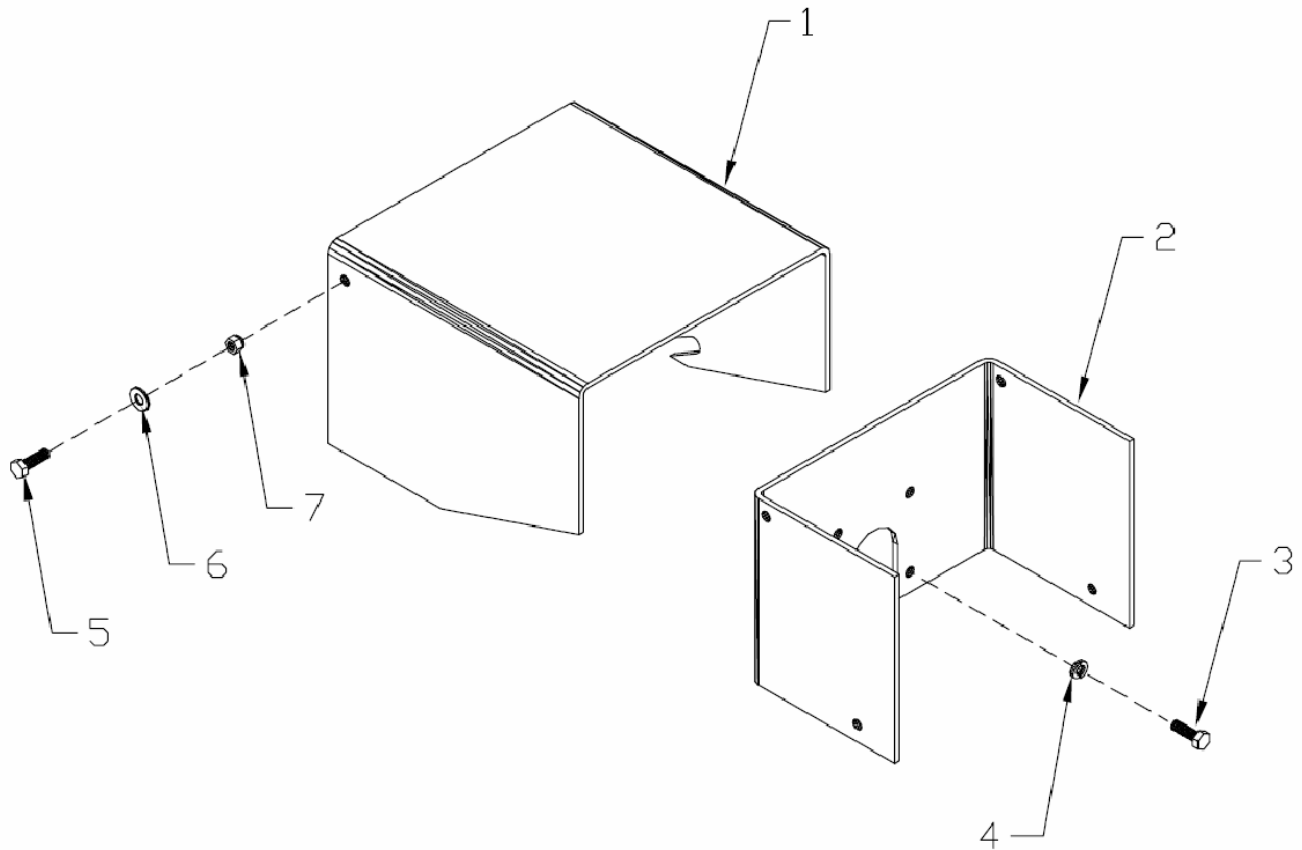

Ref. No.	Part No.	Description	Qty
1	2517	Shield Cover	1
2	2510	Shield Face Plate	1
3	3006	Bolt	4
4	4305	Lock Washer	4
5	2512	Bolt	2
6	3415	Washer	2
7	2513	Nut	2


Optional
Equipment
and
Other Items
not Illustrated

 T-168 Counter Weight Assembly

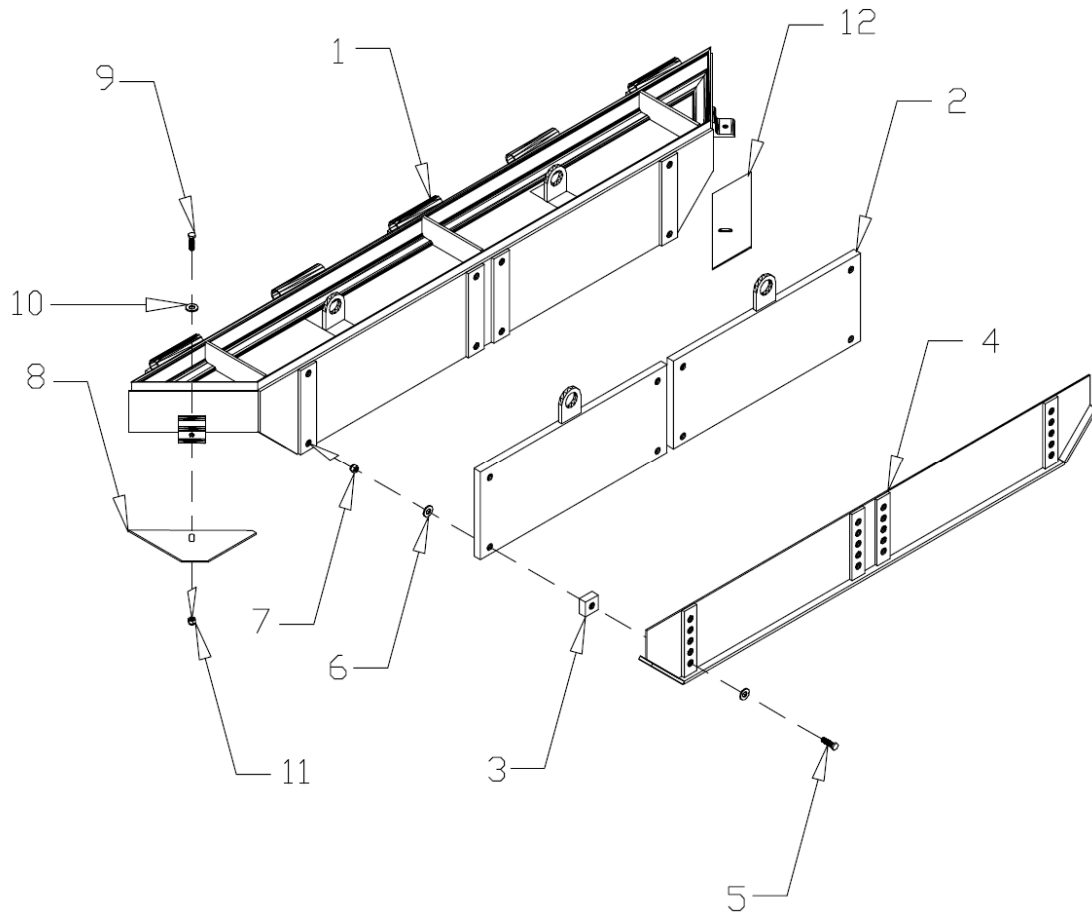


Ref. No.	Part No.	Description	Qty
1	3513	Counter Weight Frame	1
2	3235	100 LB. Weight	3
Not Shown	3236	75 LB. Weight	AR
Not Shown	3237	50 LB. Weight	AR
Not Shown	3238	25 LB. Weight	AR
3	3239	Spacer for 100 LB. Weight	4
Not Shown	3240	Spacer for 75 LB. Weight	AR
Not Shown	3241	Spacer for 50 LB. Weight	AR
Not Shown	3242	Spacer for 25 LB. Weight	AR
4	3243	Skid Shoe	1
5	2076	Bolt	8
6	3285	Washer	16
7	2077	Nut	8
8	3514	Front Chain Guard	1
9	2335	Bolt	2
10	2337	Washer	2
11	2336	Nut	2
12	3515	Rear Chain Guard	1

 Tongue with Fixed Clevis

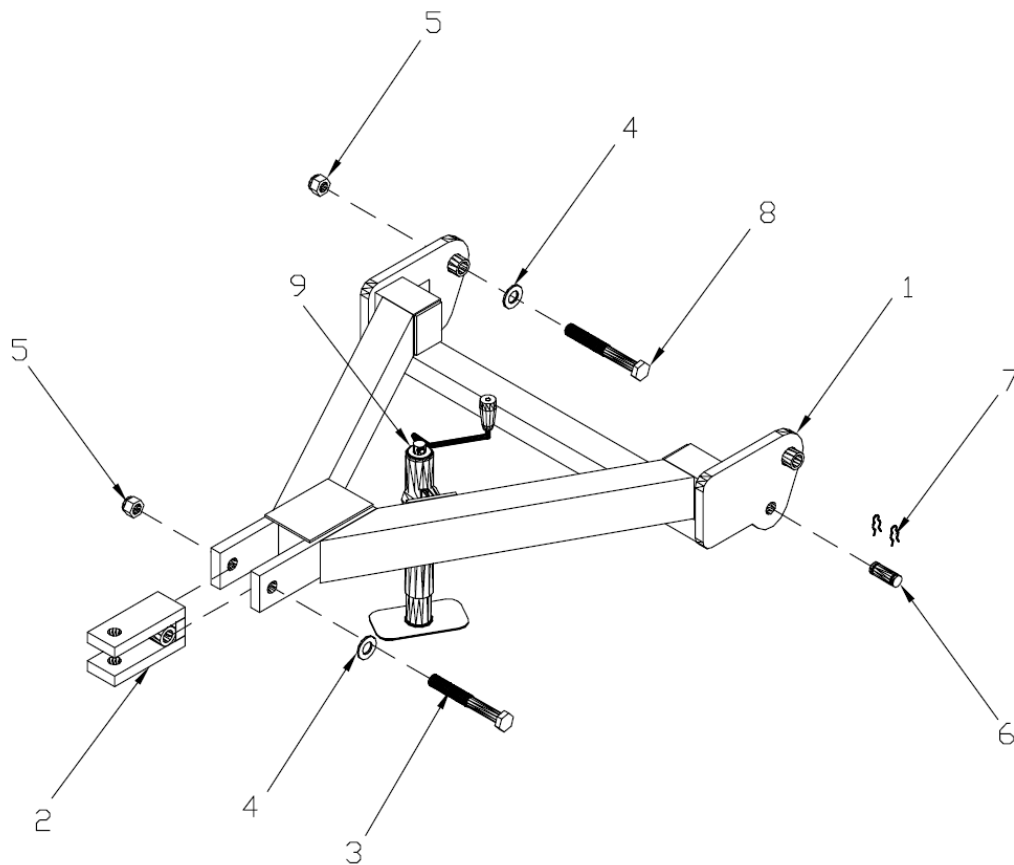


Ref. No.	Part No.	Description	Qty
1	4088	Tongue Only for Fixed Clevis	1
2	2312	Clevis	1
3	2968	Bolt	1
4	3449	Washer	3
5	2638	Nut	3
6	2315	Level Rod Pin	2
7	2313	Cotter Pin	4
8	2629	Bolt	2
9	2969	Jack	1

 Tongue Assembly with Bulldog Hitch

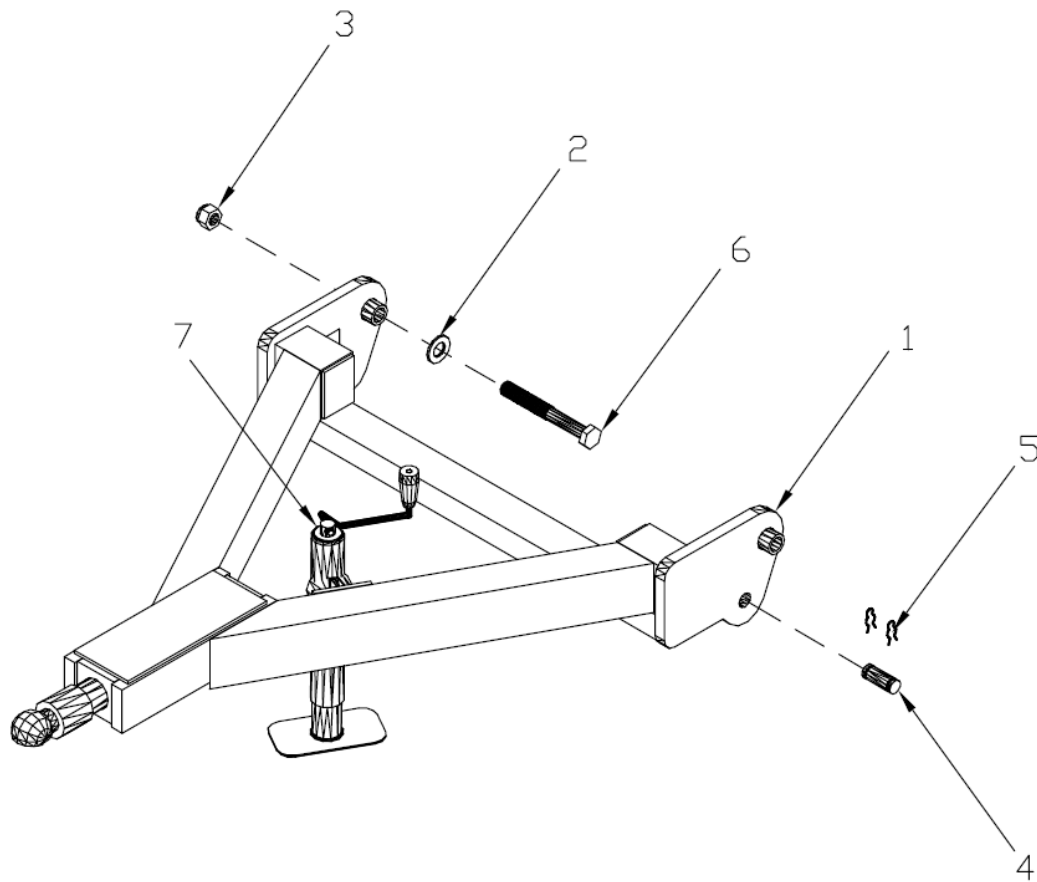

Ref. No.	Part No.	Description	Qty
1	4105	Tongue with Bulldog Hitch Only	1
2	3449	Washer	2
3	2638	Nut	2
4	2315	Level Rod Pin	2
5	2313	Cotter Pin	4
6	2629	Bolt	2
7	2969	Jack	1

 Winch Stand Assembly

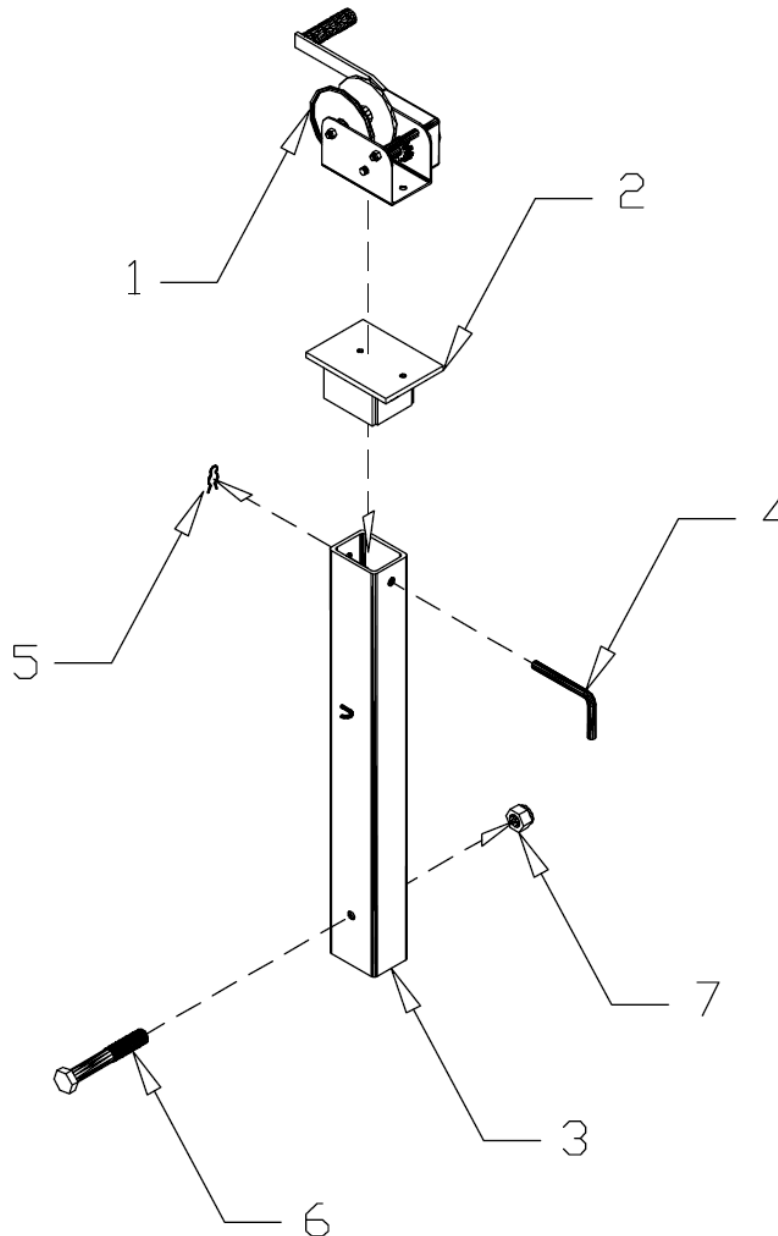

Ref. No.	Part No.	Description	Qty
1	2645	Winch Assembly with Cable	1
2	2674	Winch Stand Cap	1
3	3658	Winch Stand	1
4	2648	Pin	1
5	2372	Hair Pin	1
6	4550	Bolt	1
7	2336	Nut	1
Not Shown	2508	Pulley	1

Items not Illustrated

Part No.	Description	Qty
2484	Standard Solid Rubber Tire and Wheel	6
2489	Rim for 2490 Tire	REF
2490	26" Standard Aircraft Type Tire and Wheel	REF
2564	28" Optional Aircraft Type Tire and Wheel	REF
2565	Rim for 2564 Tire	REF
2622	Foam Filled Implement Tires and Wheel	REF
3275	26" Aircraft Tire Only	REF
3276	Tube for 26" Aircraft Tire	REF
3277	28" Aircraft Tire Only	REF
3278	Tube for 28" Aircraft Tire Only	REF
3516	Foam Filled Aircraft Tire	REF

Notes

